

RL3/RL4/RL3e/RL4e

Battery Replacement ■ ■ ■

Removal:

1. Remove any cables from the printer.
2. With the printer bottom side up, remove the old battery by pulling inward on the battery latch and then lifting the battery up out of the printer.



Installation: *(reverse of removal, refer to the previous illustration if necessary)*

1. With the new battery in position, pivot the battery downward until it latches into the printer.
2. Refer to your RL Series model Users Guide for charging information.
3. Reconnect the cables that were removed when starting the battery installation process.



If you have questions or require more information, additional support can be found at on our website at www.datamax-oneil.com.



This product contains a lithium battery. The crossed-out wheeled bin shown to the left is used to indicate 'separate collection' for all batteries and accumulators in accordance with European Directive 2006/66/EC. Users of batteries must not dispose of batteries as unsorted municipal waste. This Directive determines the framework for the return and recycling of used batteries and accumulators that are to be collected separately and recycled at end of life. Please dispose of the battery according to your local regulations.

No Liability for Negligent Use

In no event shall Datamax-O'Neil be held liable for any damages whatsoever (including, without limitations, damages for loss of profits, business interruption, loss of information, or other pecuniary loss) arising out of negligence in use and care of the product.

right by our customers. ■ ■ ■



datamax·oneil