

Barcode Scanner User Manual[†]



W010F01
Start

System Setting



WFFD980
Factory default

Communication Interface



W070901
USB_KBW



USB virtual serial
W070902

Scanner Mode



W030000
Trigger mode



W030002
Continuous mode

※ Press the trigger button 12 seconds to
change Trigger and presentation mode



W010F00
End



W010F01
Start

Keyboard case control



W381A00
Default *



W381A20
Uppercase



W381A30
Lowercase

Terminator



W103110
Enter



W103100
Field Exit



W010F00
End



W010F01
Start

Keyboard language



WFF1900
USA *

Beep



W041200
Good Read Beep Off



W041204
Good Read Beep On



W010F00
End



W010F01
Start



W010F01
Start



W010F01
Start



W010F01
Start

Barcode Enable and Disable



Enable all Barcodes



W016601
Enable EAN-13



W017401
Enable Code 39



W06C00
Disable Interleaved 2 of 5
check digit verification



WFFD982
Disable all Barcodes



W016600
Disable EAN-13



W017400
Disable Code 39



W016101
Enable Code 128



W036B02
Enable UPC-A



W036203
Enable GS1-128



W016100
Disable Code 128



W036B00
Disable UPC-A



W036200
Disable GS1-128



W016501
Enable EAN-8



W016901
Enable UPC-E



W016C01
Enable Interleaved 2 of 5



W016500
Disable EAN-8



W016900
Disable UPC-E



W016C00
Disable Interleaved 2 of 5



W010F00
End



W010F00
End



W010F00
End



W010F00
End