

Enterprise Mobile Computer

- EA530 / EA530 Wi-Fi / EA530 UHF -



User Manual

Version 1.0

Revision History

Date	Change Description	Version
2026/4/30	Initial Version	V1.0

Preface

About This Manual

Thank you for purchasing the Unitech product.

This manual explains how to install, operate and maintain our product.

No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, such as photocopying, recording, or information storage and retrieval systems, without permission in writing from the manufacturer. The material in this manual is subject to change without notice.

Regulatory Compliance Statements

FCC Warning Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

1. This transmitter must not be co-located or operating in conjunction with any other

antenna or transmitter.

2. This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. To maintain compliance with FCC RF exposure requirements, avoid direct contact to the transmitting antenna during transmitting.
3. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

FCC Label Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

RF Radiation Exposure Statement

For body contact during operation, this device has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.0 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

European Conformity Statement

Unitech Electronics co., Ltd herewith declares that the Unitech product is in compliance with the essential requirements and all other provisions of the RED 2014/53/EU directive.

The declaration of conformity is available for download at:

<https://portal.Unitech.eu/public/Safetyregulatorystatement>

The device is restricted to indoor use only when operating in the 5955~6515MHz WLAN band.

CE RF Exposure Compliance

For body-worn operation, this device has been tested and meets the ICNIRP guidelines and the European Standard EN 62209-2, for use with dedicated accessories, SAR is measured with this device at a separation of 0.5 cm to the body, while transmitting at the highest certified output power level in all frequency bands of this device. Use of other accessories which contain metals may not ensure compliance with ICNIRP exposure guidelines.

In accordance with Directive 2022/2380 of the European Union, we hereby provide specific information regarding the charging capabilities and compatible devices for the CE USB-C Adapter. This notice aims to offer essential details to purchasers for informed use and compliance with the outlined safety and performance standards.

Please note that this device supports fast charging via USB Power Delivery (USB PD), allowing for efficient charging at higher power levels when paired with compatible devices.

For reference to the detailed charging power specifications applicable to each device model, please find the link to consult our cloud-based table or scan the QR code provided below.

For detailed information on charging power specifications:

[Unitech Products USB-C Charging Power Specification Overview](#)



CE Mark Warning



RoHS Statement



This device conforms to RoHS (Restriction Of Hazardous Substances) European Union regulations that set maximum concentration limits on hazardous materials used in electrical and electronic equipment.

Waste electrical and electronic equipment (WEEE)



Unitech has set up a policy and process to meet the 2012/19/EU concerning electronic waste disposal.

For more detailed information of the electronic waste disposal of the products you have purchased from Unitech directly or via Unitech's resellers, you shall either contact your local supplier or visit us at: <https://portal.Unitech.eu/public/WEEE>

Taiwan NCC Warning Statement

低功率射頻器材技術規範

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。應避免影響附近雷達系統之操作。高增益指向性天線只得應用於固定式點對點系統。

MPE警語：

電波功率密度MPE標準值： $1.0\text{mW}/\text{cm}^2$ ，送測產品實測值： $\quad\quad\quad\text{mW}/\text{cm}^2$ ，

建議使用時設備天線至少距離人體20公分。

注意事項：

1. 使用過度恐傷害視力。
2. 使用30分鐘請休息10分鐘；未滿2歲以下幼兒不看螢幕，2歲以上每天看螢幕不要超過1小時。
3. 減少電磁波影響，請妥適使用。

Note:

Within the 5.25-5.35 GHz band, U-NII devices will be restricted to indoor operations to reduce any potential for harmful interference to co-channel MSS operations.

Laser Information

The Unitech product is certified in the U.S. to conform to the requirements of DHHS/CDRH 21CFR Subchapter J and to the requirements of IEC 60825-1. Class II and Class 2 products are not considered to be hazardous. The Unitech product contains internally a Visible Laser Diode (VLD) whose emissions do not exceed the maximum limits as set forth in the above regulations. The scanner is designed so that there is no human access to harmful laser light during normal operation, user maintenance or prescribed service operations.

The laser safety warning label required by the DHHS/IEC for the Unitech product's optional laser scanner module is located on the memory compartment cover, on the back of the unit.

* Laser information only applies to the products with laser components.

CAUTION! Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light. Use of optical instruments with the scanner, including binoculars, microscopes, and magnifying glasses, with will increase eye damage. This does not include eyeglasses worn by the user.

LED Information

The Unitech product contains LED indicator(s) or LED ring whose luminance is not harmful to human eyes during normal operation, user maintenance or prescribed service operations.

*LED information only applies to the products with LED components.

Battery Notice

Performance and Replacement

- For optimal performance, it is recommended to replace rechargeable batteries annually or after 500 charging cycles.
- It's normal for the battery to swell or expand slightly after a year or 500 cycles. This doesn't cause damage but indicates the battery should be replaced and disposed of properly according to local regulations.
- If battery performance drops by more than 20%, it has reached its end of life and should be replaced and disposed of properly.

Battery Life and Conservation

- Battery life depends on the battery type and device usage.
- Avoid fully discharging the battery as this puts stress on it. Several partial charges are better than one full discharge.
- Do NOT expose the battery or device to high temperatures for extended periods, such as in a parked car on a hot day or under direct sunlight. High temperatures can damage the battery. Keep the device within acceptable operating temperatures (refer to the specifications).
- For long-term storage, charge the battery to at least 50% every six months. Leaving the battery uncharged for extended periods will reduce its lifespan.
- If the battery cannot be charged after a long idle period and starts to heat up, do not attempt to charge it. It may be damaged.

Important Cautions

- **Use original batteries only from Unitech.** Using third-party batteries can damage the device and void the warranty.
- **Risk of explosion if the battery is replaced incorrectly.** Dispose of used batteries according to instructions.
- RISK OF EXPLOSION IF BATTERY IS REPLACED INCORRECTLY.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- 電池若未正確更換，可能會爆炸。請用原廠建議之同款或同等級的電池來更換，請依原廠指示處理廢電池。

- 请依制造商说明书处理用过之电池，如果更换不正确之电池行事会有爆炸的风险，请依制造商说明书处理用过之电池

Charging

- Consider temperature when charging. Charging is most efficient at room temperature or slightly cooler.
- Charge batteries within the specified range of 0°C to 40°C (32°F to 104°F). Charging outside this range can damage the battery and shorten its lifespan.
- **Do not charge batteries below 0°C.** This is dangerous and can make the batteries unstable. Use a battery temperature detecting device to ensure safe charging temperatures.

Maintenance and Safety

- Keep all connectors free of contaminants like dust, grease, mud, and water to ensure proper device operation. Neglecting this can cause communication issues, short circuits, or overheating.
- **To clean the battery connectors:**
 - Remove the main battery from the mobile computer.
 - Dip the cotton part of a cotton-tipped applicator in isopropyl alcohol.
 - Gently rub the cotton part of the applicator back and forth across the connectors on both the battery and the device to remove any grease or dirt. Ensure no cotton residue is left on the connectors.
 - Repeat this process at least three times.
 - Use a dry cotton-tipped applicator and repeat steps 3 and 4.
 - Inspect the area for any remaining grease or dirt and repeat the cleaning if needed.
- **To clean the cradle connectors:**
 - Disconnect the DC power cable from the cradle.
 - Dip the cotton part of a cotton-tipped applicator in isopropyl alcohol.
 - Rub the cotton part of the applicator along the pins of the connector, moving it back and forth gently from one side to the other. Do not leave any cotton residue on the connector.
 - Rub all sides of the connector with the applicator.
 - Remove any lint left by the applicator.

- If there is grease or dirt on other areas of the cradle, use a lint-free cloth and alcohol to clean them.
- Allow the alcohol to air dry for at least 10 to 30 minutes (depending on the ambient temperature and humidity) before powering on the cradle.

CAUTION! *If you clean the battery or cradle connectors with bleach-based chemicals, follow the instructions above to remove any bleach residue from the connectors.*

- If a connector is damaged, have it repaired before using the device to avoid short circuits.
- While charged batteries can be left unused for several months, their capacity may decrease due to internal resistance buildup. They may need recharging before use.
- Store batteries at temperatures between -20°C to 60°C. Higher temperatures can cause faster depletion. Room temperature storage is recommended.
- The above storage information applies only to removable batteries. For devices with non-removable batteries, refer to the product specifications.

Battery Safety Guidelines

- Charge the device in a clean area, away from debris, flammable materials, or chemicals. Take extra care when charging in non-commercial environments.
- Improper battery use can lead to fire, explosion, or other hazards.
- Do not disassemble, open, crush, bend, deform, puncture, or shred the battery.
- Dropping the device can cause the battery to overheat.
- Do not short-circuit the battery or allow metal or conductive objects to touch the battery terminals.
- Do not modify the battery, insert foreign objects, expose it to water or other liquids, or expose it to fire, explosion, or other hazards.
- Do not leave or store the device in hot areas, like parked cars or near heat sources. Do not put the battery in a microwave or dryer.
- Supervise battery usage by children.
- If swallowed, seek medical advice immediately.
- In case of leakage, avoid contact with skin and eyes. If contact occurs, flush the affected area with water for 15 minutes and seek medical advice.
- If you suspect damage to the equipment or battery, contact your service provider for inspection.

Product Operation and Storage Notice

The Unitech product has applicable operation and storage temperature conditions. Please follow the limitation of suggested temperature conditions to avoid failure, damage or malfunction.

**For applicable temperature conditions, please refer to the specification of each product.*

Adapter Notice

1. Please do not leave the power adapter in the socket when it is not connected to your Unitech product for charging.
2. Please remove the power adapter when the battery is fully recharged.
3. The bundled power adapter that comes with your Unitech product is not meant to be used outdoors. An adapter exposed to water or rain, or a very humid environment can cause damage to both the adapter and the product.
4. Please only use the bundled power adapter or same specification of adapter to charge your Unitech product. Using the wrong power adapter can damage your Unitech product.

** The message above only applies to the product connected to the adapter.
For the products without using the adapters, please refer to the specification of each product.*

Hearing Damage Warning

To prevent possible hearing damage, do not listen at high volume levels for long periods.



Figure 1 – Warning label (IEC 60417-6044)

Worldwide Support

Unitech's professional support team is available to quickly answer questions or assist with technical-related issues. Should an equipment problem occur, please contact the nearest Unitech regional service representative.

For complete contact information please visit the Web sites listed below:

Taipei, Taiwan – Headquarters Tel: +886-2-89121122 E-mail: info@hq.ute.com Address: 5F, No. 136, Lane 235, Baoqiao Road, Xindian District, New Taipei City 231, Taiwan (R.O.C.) Website: http://www.ute.com	Europe & Africa Tel: +31-13-4609292 E-mail: info@eu.ute.com Address: Kapitein Hatterasstraat 19, 5015 BB, Tilburg, the Netherlands Website: http://eu.ute.com
Mainland China Tel: +86-59-2310-9966 E-mail: info@cn.ute.com Address: Room401C, 4F, RIHUA International Mansion, Xinfeng 3rd Road, Huoju Hi-tech District, Xiamen, Fujian, China Website: http://cn.ute.com	Japan Tel: +81-3-62310896 E-mail: info@unitech-japan.co.jp Address: 3F Tosei Building, 18-10, Nihonbashi-Hakozakicho, Chiyodoku, Tokyo 103-0015, Japan Website: https://jp.ute.com
Asia & Pacific / Middle East Tel: +886-2-27911556 E-mail: info@tw.ute.com Address: 4F., No. 236, ShinHu 2nd Rd., NeiHu Chiu, 114, Taipei, Taiwan Website: http://apac.ute.com	Latin America Tel: +52-55 9595 9648 E-mail: info@latin.ute.com Address: Rio Becerra 154 Piso 3 Colonia Napoles, Delegacion Benito Juarez, CP 03810 Mexico Website: http://latin.ute.com
North America Tel: +1-714-8916400 E-mail: info@us.ute.com / info@can.ute.com Address: 6182 Katella Ave, Cypress, CA 90630, USA Website: http://us.ute.com	Please scan QRCode to visit us: 

Warranty Policy

The following items covered under the Unitech Limited Warranty are free from defects during normal use:

The warranty period is varied from each country. Please consult with your supplier or Unitech local office for actual length of warranty period to your purchased product.

Warranty becomes void if equipment is modified, improperly installed or used, damaged by accident or neglect, or if any parts are improperly installed or replaced by the user.

Privacy Policy

This policy is developed in accordance with EN 18031 and the GDPR and applies to all Unitech products and services, including but not limited to rugged mobile devices, barcode scanners, mobile applications, and backend platform systems. Unitech respects your privacy and is committed to processing personal data in accordance with the principles of lawfulness, fairness, transparency, and data minimization.

Data Controller

Company Name: Unitech Electronics Co., LTD

Address: 8F, No. 122, Ln. 235, Baoqiao Rd., Xindian Dist., New Taipei City 231, Taiwan

Email: info@hq.ute.com

Website: <https://www.ute.com>

A. Lawful Basis of Processing

We collect and process your personal data only when there is a lawful basis to do so. These bases include:

1. To fulfill contractual obligations (e.g., account registration, device activation, after-sales support)
2. To comply with legal obligations (e.g., tax compliance, security incident reporting)
3. Based on your explicit consent (e.g., enabling location or integrating with third-party platforms)
4. To pursue legitimate interests of Unitech or third parties (e.g., abuse detection, service security)

B. Categories of Personal Data Collected

We may collect your information through:

1. Information you voluntarily provide (e.g., repair requests, registration, technical support)
2. Data automatically generated during your use of our products or services
3. Information lawfully obtained from authorized third parties

Types of data include:

- Device Information: such as serial number, IMEI, MAC address, OS, and model name
- Application and Log Data: including installed application lists, usage records, error logs, and crash reports
- Operational Data: such as scanned barcode content, photos, GPS information, Wi-Fi or mobile IP address, and usage timestamps
- Account Data: including system login username and email address (as configured by authorization)
- Biometric Data: such as facial or fingerprint recognition (stored locally on the device and not uploaded)
- Location Information: GPS, Wi-Fi, or cell tower data collected when location services are enabled
- Configuration Parameters: system and application settings stored locally or on cloud service servers
- Mobile Network Information: such as ICCID, IMSI, carrier name, mobile network type, SIM slot usage, and phone number (if available). This data is primarily used for mobile communication features, device identification, and diagnostic analysis

C. Use of Personal Data

When you use our products or services, we may process your personal data for the following purposes:

1. Providing core product functions, such as login, barcode scanning, data synchronization, and location services
2. Assisting with account registration, preference settings, and device activation
3. Delivering system notifications and update alerts (e.g., firmware upgrades)
4. Analyzing error data for device diagnostics and maintenance support
5. Integrating third-party enterprise management platforms (e.g., MDM or cloud systems), based on your consent
6. Enabling security authentication and device identification
7. Enhancing the overall user experience and optimizing our products and services, including statistical analysis and usage trend research

Unitech does not use your personal data for targeted advertising or profiling, nor do we sell your data to any third parties.

D. Delegated Processing, Sharing, Transfers, and Disclosures of Personal Data

We may process or share your personal data under the following circumstances:

1. Delegated Processing: We may engage trusted third-party service providers to assist with device operations, remote support, or related services. In such cases, we will enter into data protection agreements with those vendors and require that they process personal data in accordance with this policy.
2. Data Sharing: We do not share your personal data with third parties without your prior consent, unless required by law or when the service you use integrates with third-party platforms (e.g., MoboLink, device management systems).
3. Data Transfers: In the event of a corporate merger, acquisition, or bankruptcy that results in data transfer, we will notify you and ensure that the recipient continues to comply with this privacy policy.
4. Public Disclosure: Your data may be disclosed only when required by applicable law or with your explicit authorization, such as during regulatory investigations or legal proceedings.

E. Protection of Children's Personal Data

This product and its associated services are not intended for children under the age of 13, and we do not knowingly collect personal data from children. If we become aware that personal data from a child has been inadvertently collected, we will take prompt steps to delete the data and cease any further processing. Parents or legal guardians may contact us to request deletion.

F. Security Measures for Personal Data Protection

We are committed to ensuring the security of your personal data and have implemented a range of measures, including but not limited to, the following:

1. Use of encrypted communication and secure storage technologies
2. Implementation of user authentication and access control mechanisms
3. Logging of data access and monitoring of abnormal behavior
4. Restriction of access to personal data to authorized personnel only, all of whom are bound by confidentiality obligations
5. Regular vulnerability scanning, patching, and risk assessments

In the event of a data breach, we will take appropriate action and notify the relevant authorities in accordance with applicable laws and regulations.

G. Data Accuracy and Integrity

We collect and process personal data solely for specified and legitimate purposes. Measures such as data validation, user authorization, and system controls are implemented to ensure the accuracy, integrity, and timeliness of the information.

H. Cross-Border Transfer of Personal Data

Some of our servers or services may be located outside your jurisdiction. Where cross-border transfer of personal data is necessary, we will comply with applicable local laws and implement appropriate safeguards, such as Standard Contractual Clauses (SCCs), encryption measures, or security assessments, to ensure the confidentiality and integrity of your information.

I. Data Retention

We retain your personal data only for as long as necessary to fulfill the purposes for which it was collected. Once the retention period has expired, we will delete, anonymize, or de-identify the data in accordance with its nature and applicable legal requirements, ensuring that it can no longer be identified or reconstructed.

Certain types of data—such as transaction records, customer support logs, and error reports—may be retained for longer periods to comply with legal obligations, auditing requirements, information security policies, dispute resolution needs, or service improvement purposes. We regularly review the necessity of such retention in accordance with data minimization and security principles.

J. Personal Data Rights

You have the following rights regarding your personal data:

- To request access to the personal data we hold about you
- To request rectification, supplementation, or erasure of inaccurate or outdated data
- To withdraw your consent to data processing (where applicable)
- To request data portability or the deletion of your account

To exercise any of the above rights, please contact us at info@hq.ute.com. In accordance with the GDPR, we will respond to your request within 30 days of receipt. If your request is particularly complex or numerous, we may extend this period by up to an additional two months and will inform you of the reason for the extension within the first month.

K. Privacy Policy Updates

This Privacy Policy may be updated from time to time to reflect changes in our business practices or legal obligations. If any material changes are made to the purposes or scope of personal data usage, we will notify you in accordance with applicable legal requirements. The latest version will be incorporated into the product user manual.

L. Disclaimer

While we implement reasonable and appropriate security measures to protect your personal data, you acknowledge that no system can eliminate all risks inherent in operating over open networks. Unitech shall not be held liable for any unauthorized access, use, disclosure, or destruction of personal data caused by third parties beyond our control. You are responsible for safeguarding your account credentials, and Unitech will not be held liable for any data breach or damages resulting from user negligence.

M. Contact Us

If you have any questions, suggestions, or requests regarding this Privacy Policy or the protection of your personal data, please contact us using the information below:

Email: info@hq.ute.com

Website: <https://www.ute.com/en/contact>

Note:

Please read this Privacy Policy carefully before using this product. You may choose whether to enable certain features (such as location services or network synchronization). By enabling such features, you consent to the collection and processing of your personal data as necessary for the operation of those features.

Table of Contents

Preface.....	i
Regulatory Compliance Statements	i
Laser Information	vi
LED Information	vi
Battery Notice.....	vii
Adapter Notice	x
Hearing Damage Warning	xi
Worldwide Support	xii
Warranty Policy	xiii
Privacy Policy	xiv
Chapter 1 - Overview.....	2
1.1 Package	2
1.2 Product Detail.....	3
1.3 Specifications	5
1.4 Getting Started	8
Chapter 2 – Installation & Operation	16
2.1 UHF Setting (EA530 UHF Only)	16
2.2 HF Setting	22
2.3 WWAN Setting (4G Ver. Only)	25
2.4 WLAN Setting.....	32
2.5 PAN Setting	40
2.6 GPS Setting	42
2.7 PC Setting	43
2.8 Camera Setting	45
2.9 USS Camera	50
2.10 Performing a Hardware Reset.....	53
2.11 Performing Factory Data Reset	54
2.12 KeyRemap	55
2.13 Split Screen	58

2.14 Network Time Protocol (NTP) Server60

Chapter 3 – Introduction to Applications.....61

3.1 Unitech SW Solutions (Overview)61

3.2 USS (Unitech Scan Service)63

3.3 Enterprise Keyboard.....67

3.4 Logger68

3.5 Software Update.....70

3.6 Software Update.....72

Chapter 1 - Overview

1.1 Package

Please make sure the following contents are in the gift box. If something is missing or damaged, please contact your Unitech representative.

The Package Contents

- EA530 Enterprise Mobile Computer
- Battery
- USB-C Cable
- Quick Start Guide

Optional Accessories

- Power Adapter (with US / EU / UK / AU plug)
- Stylus (5.5mm)
- Hand Strap
- Coiled Strap
- Screen Protector
- Gun Grip
- Single Slot Charging Cradle
- Single Slot USB / Ethernet Cradle

1.2 Product Detail



1. Barcode Scanner Window
2. Receiver
3. LED Indicator
4. Front Camera

5. Volume Key
6. Scanner Trigger Key
7. Power Button
8. Programmable Key



- 9. Rear Camera
- 10. Hand Strap Attachment Point
- 11. NFC
- 12. Speaker
- 13. Microphone (Sub)
- 14. UHF (Only for EA530 UHF)
- 15. Pogo Pin for Gun Grip

- 16. Battery Release Latch
- 17. Battery
- 18. USB-C Port
- 19. Microphone (Main)
- 20. Pogo Pin for Cradle
- 21. Hand Strap Attachment Point

1.3 Specifications

Operation System	
OS	Android 15 (Upgradable to A17)
GMS Certified	GMS Certified
CPU	Octa-core 2.2GHz Processor
Memory	6GB RAM / 64GB Flash
Security	Supports Secure Boot and Verified Boot
Languages support	Multiple languages
Others	Input Chinese/ English Supports handwriting and soft keyboard
Display	
Screen Size	6", HD+ (1440 x 720) color screen, backlight 500 nits
Touch Panel	Multi-Touch Capacitive Touch Panel, support stylus, glove, wet-finger Compatibility
Keypad	
6 keys: Programmable function button; dual dedicated scan buttons; volume up & down buttons; on / off button	
Camera	
8 MP Front camera 16 MP Rear with auto-focus function and Flash Light	
Indicator	
LED, Speaker, Vibrator	
Symbolologies	
Support All 1D & 2D major barcodes	
RFID	
UHF (EA530 UHF Only)	Up to 1.8m 865-868MHz (EU), 902-928MHz (US)
HF	Frequency 13.56MHz, support NFC Compliance w/ ISO14443A/B, ISO15693, Mifare, Felica (ISO / IEC18092)

Power Source	
Main Battery	Warm Swappable 4250mAh Li-Polymer battery / battery with cover in one piece
Regulatory Approvals	
CE, FCC, NCC, VCCI, TELEC, CCC, SRRC, BQB, N-Mark, RoHS 2.0	
Communication	
Bluetooth®	Bluetooth® 5.2 , BLE
WLAN	Wi-Fi 6E, 2.4GHz & 5GHz & 6GHz IEEE 802.11a/b/g/n/ac/d/e/h/i/k/r/u/w/v/ax, Support DBS Security: WPA3, WPA2, WPA & WEP
WWAN (4G Ver. Only)	4G LTE (FDD): B1/2/3/4/5/7/8/12/17/19/20/28a&b/66 LTE (TDD): B38/39/40/41 3G WCDMA: B1 (2100MHz), B2 (1900MHz), B4 (1700MHz), B5 (850MHz), B8 (900MHz) 2G GSM: B2 (1900MHz), B3 (1800MHz), B5 (850MHz), B8 (900MHz)
GPS (4G Ver. Only)	GPS/Beidou/Glonass/Galileo/A-GPS
Sensors	Gyroscope, G-sensor, E-compass, Light & Proximity Sensor
I/O Interfaces	
USB	USB 2.0 (Type-C), support USB OTG
POGO Pin	Pogo Pin backside: Support Gun Grip Pogo Pin bottom: Charging via cradle
SIM Slot (4G Ver. Only)	1 eSIM, 1 Nano SIM
Expansion slot	Micro SD x 1, up to 1 TB
Audio	One speaker (95dB @ 10 cm), One receiver, Dual noise-cancelling microphones, Smart PA
Enclosure	
Dimensions	161 mm x 76.8 mm x 14.15 mm (H x W x D)
Weight	242g ± 1% (with battery)
Environmental	
Operating Temperature	-20°C to 50°C
Storage Temperature	-30°C to 70°C (without battery)

Charging Temperature	0°C to 45°C
Relative Humidity	5% ~ 95% (Non-Condensing)
Drop Specification	1.5 M (1.8 M with Boot Case)
Sealing	IP65 & IP68
Vibration/Tumble Test	0.5 M tumbles for 300 cycles / 600 drops
Software	
MDM Software	SOTI, VMware and MoboLink

Note:

- EA530 UHF Wi-Fi Version is available only in Japan.
- The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

	AT	BE	BG	HR	CY	CZ	DK
	EE	FI	FR	DE	EL	HU	IE
	IT	LV	LT	LU	MT	NL	PL
	PT	RO	SK	SI	ES	SE	UK
	IS	LI	NO	CH	TR		

1.4 Getting Started

Replacing the Battery

This section describes how to replace the battery.

CAUTION! The battery is designed to be removed by hand. Do not use tools to remove the battery.

NOTE: Do not put labels, asset tags, engravings, stickers, or other objects in the battery slot, as this might compromise the performance of the device or accessories. Performance levels, such as sealing [Ingress Protection (IP)], impact performance (drop and tumble), functionality, or temperature resistance could be affected.

NOTE: If the hand strap is attached, remove the hand strap clip first.

1.4.1 Install the Battery

1. Align the battery with the battery slot and insert it from the bottom.



2. Press down the battery until you hear a “**CLICK**” sound. Make sure the battery remains securely locked in place.



1.4.2 Remove the Battery

Grasp the battery release latch from the two grooves and gently lift it upward.




1.4.3 Charging the Battery

For regular use, the terminal can be fully charged within 4 hours. We highly recommend using the original adapter.


Connect the USB-C cable to the USB port on the EA530, and plug the other end of the USB cable into the AC power adapter. Then, insert the AC power adapter into the electrical outlet.

When the EA530 is charging, the LED indicator will turn red. Once the battery is fully charged, the LED indicator will turn green.

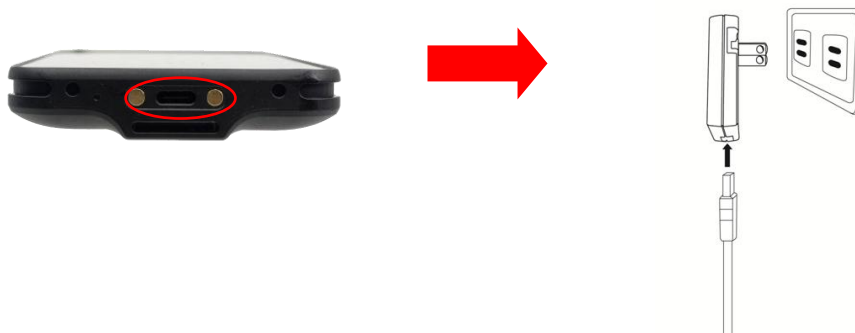

1.4.4 Battery Info


Please go to **Settings** → **Enterprise Features** → **BatteryInfo** for more detailed battery information.

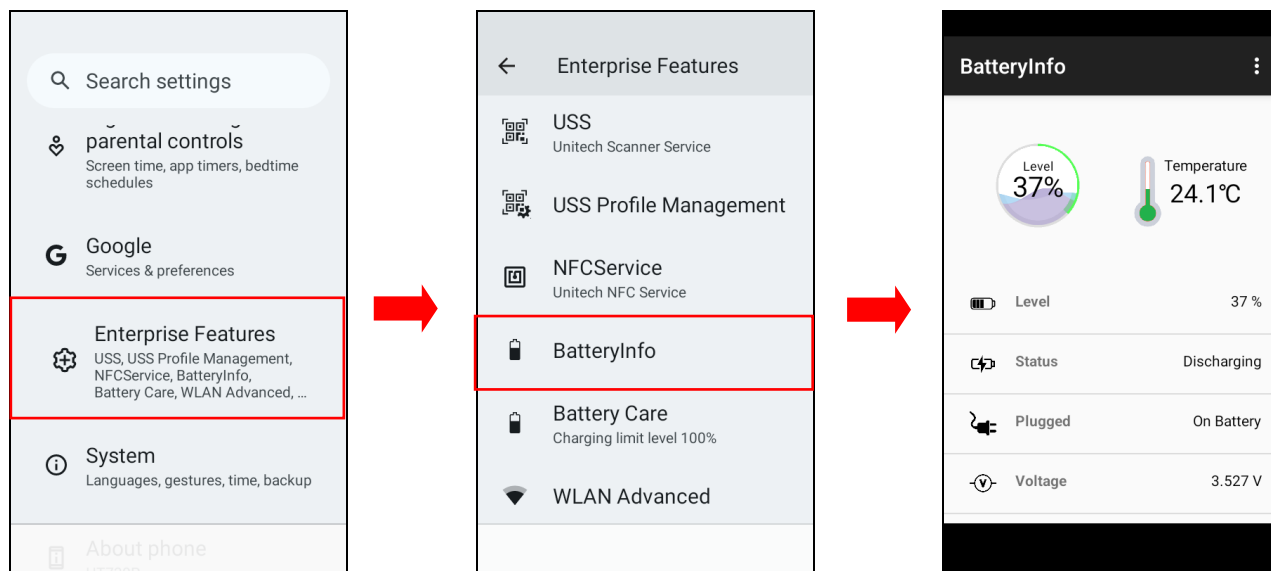


1.4.4.1 BatteryInfo Health Service

BatteryInfo health service information will display on both EA530 lock screen and the notification bar.


- When the battery health is higher than 80% :

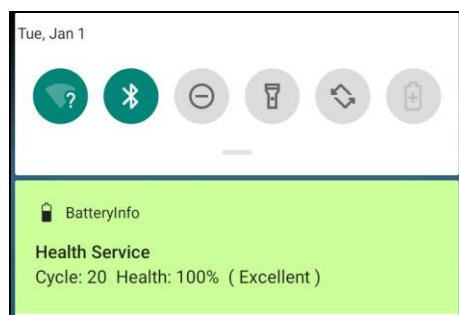

- When the battery health is higher than 60%:

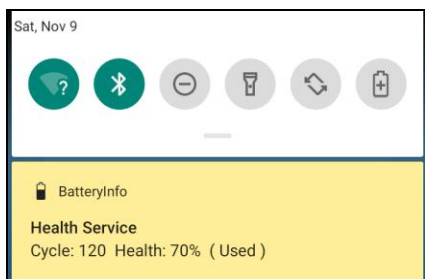

- When the battery health is lower than 60%: (Battery should be replaced)

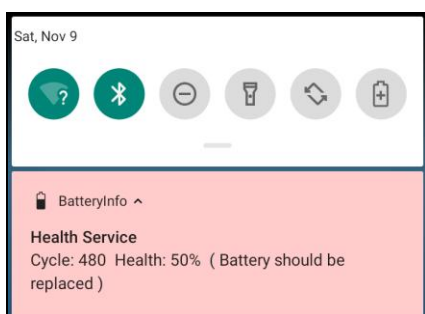

Note:

If the battery is stored for the long term, it might result in accelerated battery health lower. Please try to charge and discharge your batteries several times and check the battery health is at a steady rate. If the battery health is still lower than 60%, the battery should be replaced.

1.4.4.2 Charging Limit Function

To protect the battery, Battery Care enables you to set the maximum power level.

Set a lower charging limit to extend the lifespan of your battery. You can access this feature in **Settings** → **Enterprise Features** → **Battery Care**, as shown below to configure the charging limit.

1.4.5 Inserting the Micro SD / Nano SIM Card (4G Ver. only)

1. Pick out the Micro SD/Nano SIM card holder.



2. You may put in one SIM card and one SD card at a time.

Front		
Rear		

1.4.6 Turning on the Terminal for the First Time

It is recommended to fully charge the terminal before first use. You can now start up your device to set up the languages, WLAN setting, and date and time.

Power Button

Turn **ON** your device by pressing the Power Button on the side of the device.



1.4.7 Checking LED status

Checking the Battery Status

LED	Description
Red Light	● Battery Charging ● Battery Low when Flashing (Less Than 15%)
Green Light	● Battery Fully charged ● Barcode Scan Good Read
Blue Light	● Message
When the Scanner App is running, the LED is controlled by the app. There will be no LED display (neither Red nor Green) when the battery is depleted, even when connected to AC power.	

WARNING! *There is a risk of fire and burns if the battery is handled improperly. DO NOT disassemble, crush, puncture, short external contacts, or dispose the battery pack in fire or water. DO NOT attempt to open or service the battery. Dispose of used batteries according to local recycling guidelines in your area.*

NOTE! *To ensure the unit working properly, please keep all connectors away from the contaminants such as dust, grease, mud, and water.*

Negligence may cause the unit to lose communication, short circuit, or overheated. If the connector is damaged, please ensure the connector is fully repaired before using the unit to avoid short circuit.

DO charge between 20% and 80% to protect your battery.

Avoid full discharges (<0%) or charging all the time (always 100%) to reduce stress on the battery.

Chapter 2 – Installation & Operation

2.1 UHF Setting (EA530 UHF Only)

TagAccess Android (“TagAccess”) is a powerful Android application for multiple functions of RFID Operations via pairing with Unitech RFID Reader (**hereinafter called “reader”**). Inventory, Read & Write, Lock, Kill, Find and Data Wedge (Read RFID Tag as keystroke) functions are all bundled in TagAccess. Additionally, customized configuration of Reader for different scene is included too.

2.1.1 Initial Setting


Since partial functions of TagAccess involve with Bluetooth, File system access and system service. Before operating RFID Operations, initial setting is necessary.

The steps of setting are:

1. Allow TagAccess to access camera
2. Allow TagAccess to access location
3. Allow TagAccess to find, connect to, and determine the relative position of nearby devices
4. Allow TagAccess to send notifications
5. Set “TagAccess Keyboard”


2.1.1.1 Allow TagAccess to Access Camera

In GTIN match, camera can be used to capture barcode data. Click **“ALLOW”** to allow Camera.

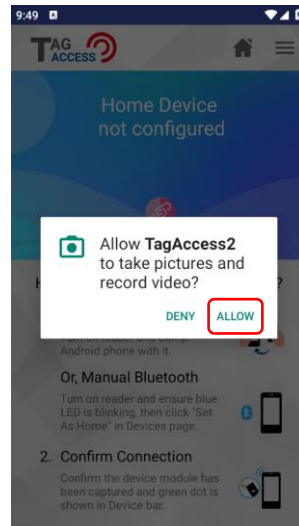


2.1.1.2 Allow TagAccess to Access Location

In Android operating system, system requires user to authorize location to turn on Bluetooth. Click **“ALLOW ALL THE TIME”** to allow location.

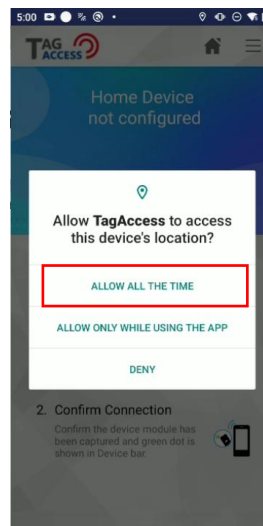


2.1.1.3 Allow TagAccess to Find, Connect to, and Determine the Relative Position of Nearby Devices

In Android operating system, system requires user to authorize find, connect to, and determine the relative position of nearby devices to discover nearby Bluetooth devices. Click **“ALLOW.”**

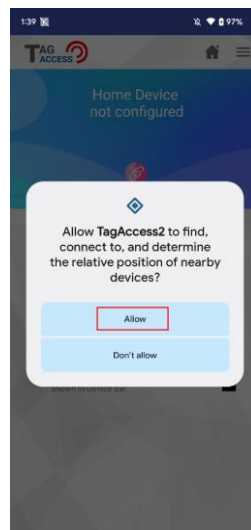


2.1.1.4 Allow TagAccess to Send Notifications

Notification permission allow TagAccess to push notifications. Click **“ALLOW.”**

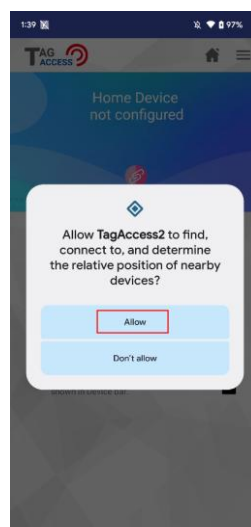

2.1.1.5 Set “TagAccess Keyboard”

TagAccess keyboard is a customized keyboard created by Unitech for operating with data wedge. By using TagAccess keyboard, user can type number, character and symbols in more convenient way. This keyboard is required to be the system default keyboard if you wish to use the Data Wedge function. Click “OK” to auto setup TagAccess Keyboard.

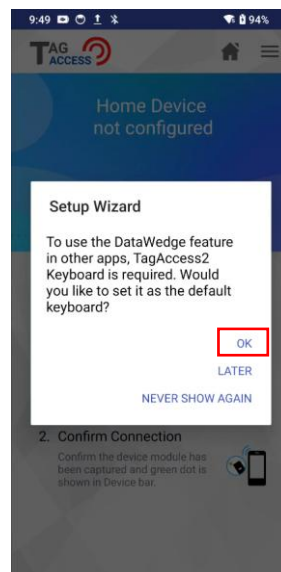

2.1.2 Homepage Introduction

In TagAccess (when paired), there are three main parts in homepage:

- A. Navigation Bar - home button and menu button
- B. Device Info Bar - Reader status and icon button
- C. Operation Pages – EPC or SGTIN Operation
- D. Main Functions of the Operation



OR

2.1.3 Menu Introduction



The menu includes 8 major modules, as described below.


Module name	Module function
EPC Operation	Enter EPC Operation page
SGTIN Operation	Enter SGTIN Operation page
Devices	Mange reader connection
Settings	To configure app or reader settings
Configuration Manager	To pre-config app and reader settings
Import / Export / Reset	To import or export app settings or reset app settings
About	To show copyright and version.
Exit	Exit TagAccess completely

Note:



Further details about TagAccess can be found in its User Manual, available for download on the EA530 UHF product page. (https://www.ute.com/en/products/detail/EA530_UHF)

2.2 HF Setting

1. On the main screen, swipe up to access the apps, then tap **Settings** , and tap **Connected devices**.

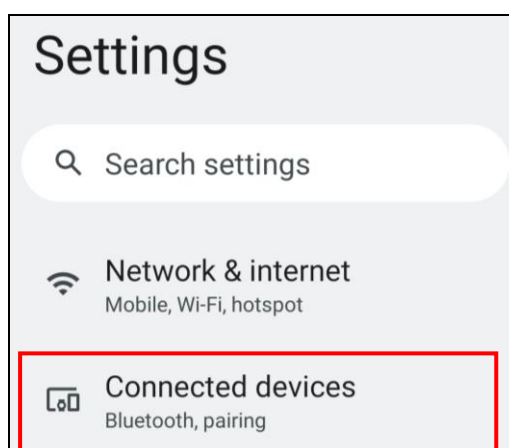

2. Tap **Connection Preferences** to enable **NFC**

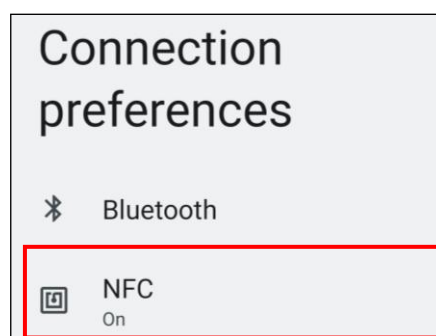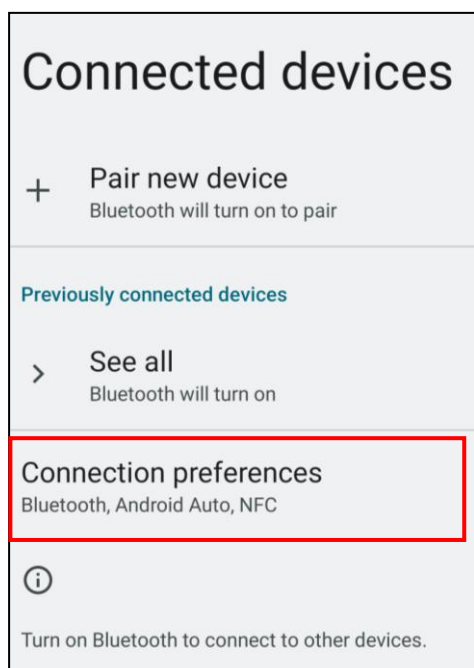

3. Make sure both devices are unlocked and NFC is turned on.

Ensure the NFC antenna area of the EA530 and the other device are close to each other. Slightly move the devices until a connection is established, then tap the screen.




2.2.1 NFCService

On the main screen, swipe up to access the apps. Tap




Settings, then tap **Enterprise**

Features, and finally tap **NFCService**.

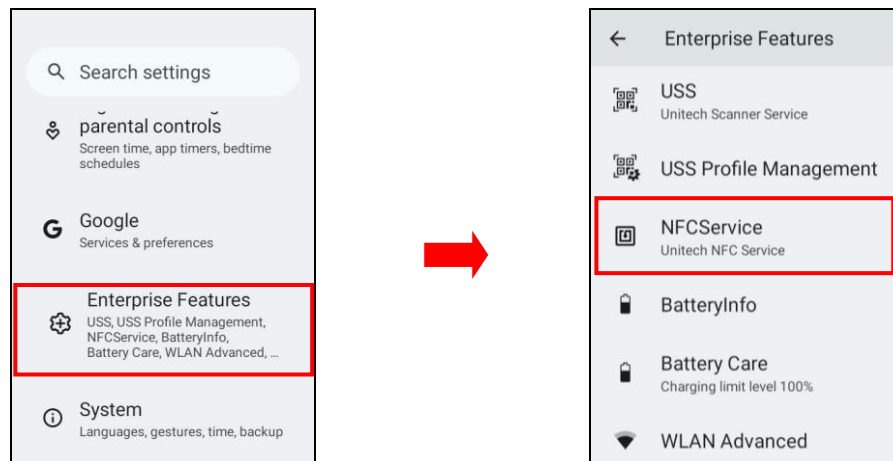

The saved data is stored in **Files** → **Documents**

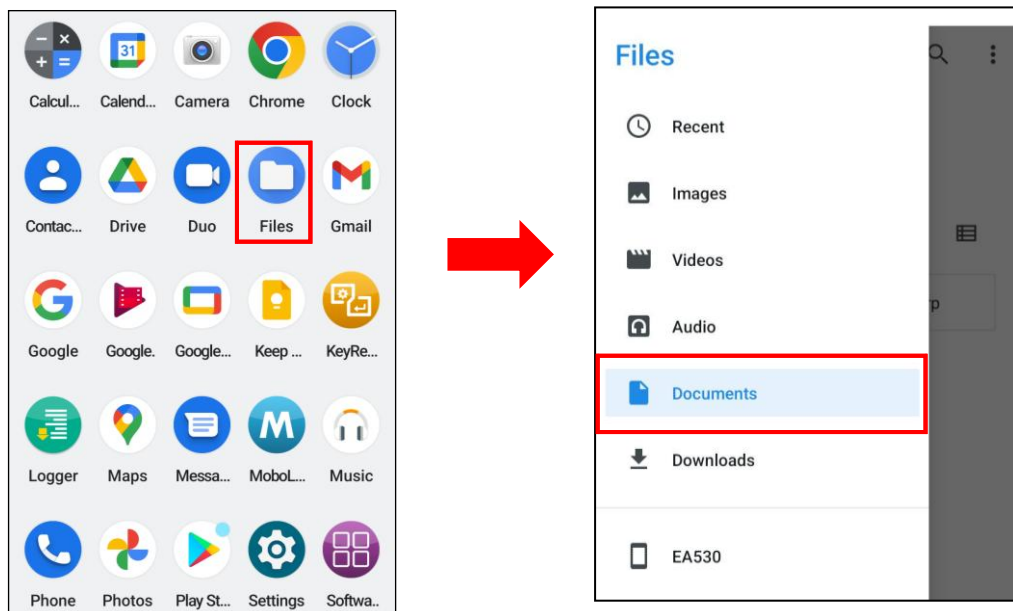


2.3 WWAN Setting (4G Ver. Only)

1. Turn off the EA530 to insert the SIM card.


Note: • For the instruction, please refer to [1.4.5 Inserting the Micro SD / Nano SIM Card](#)

2. Turn on the EA530, VoLTE 4G signal will show at the top of the screen.

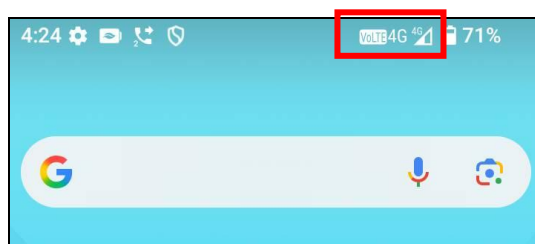


2.3.1 Mobile Network Settings


1. On the main screen, swipe up to access the apps, then tap **Settings** , then tap **Network & internet**, and finally tap **Internet**.

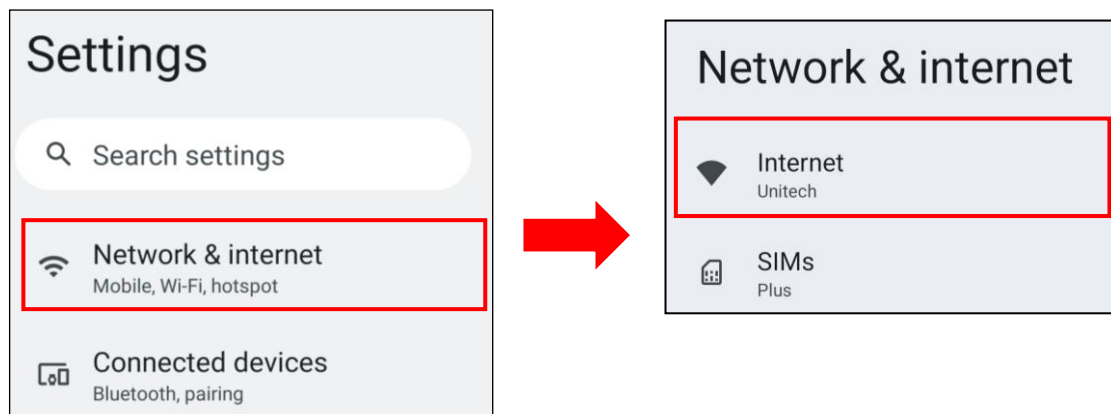

2. Tap on the settings icon for more network settings.

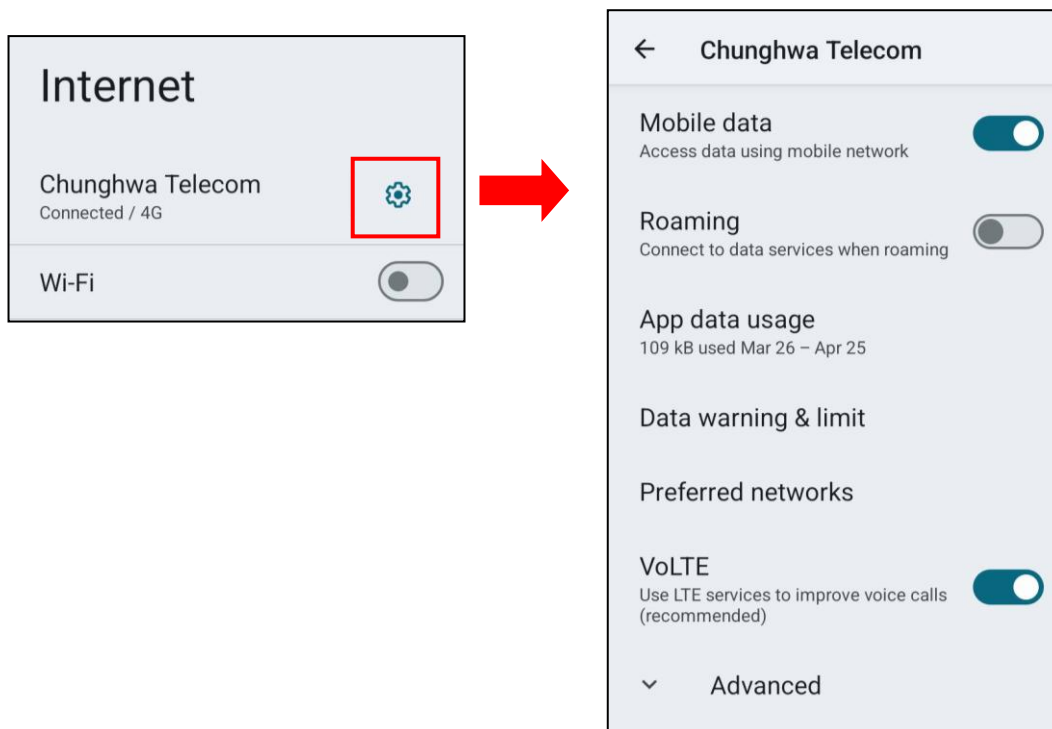


3. Tap **Advance**, and then tap **Preferred network type**.

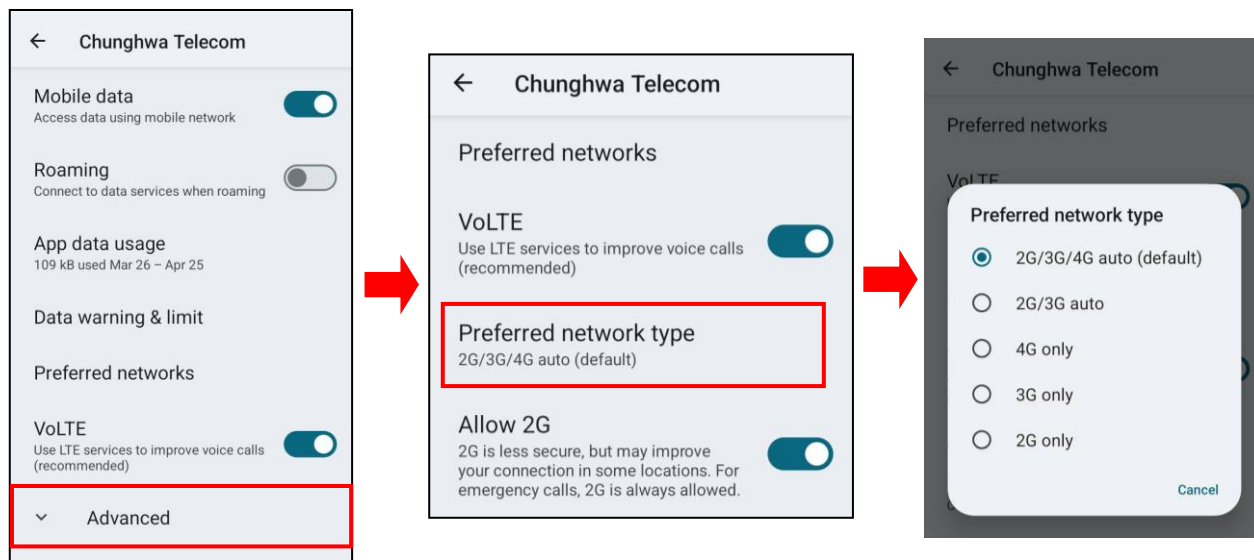


2.3.1.1 eSIM and Nano SIM Switching

1. On the main screen, swipe up to access the apps, then tap **Settings** , then tap **Network & internet**, and finally tap **SIMs**.

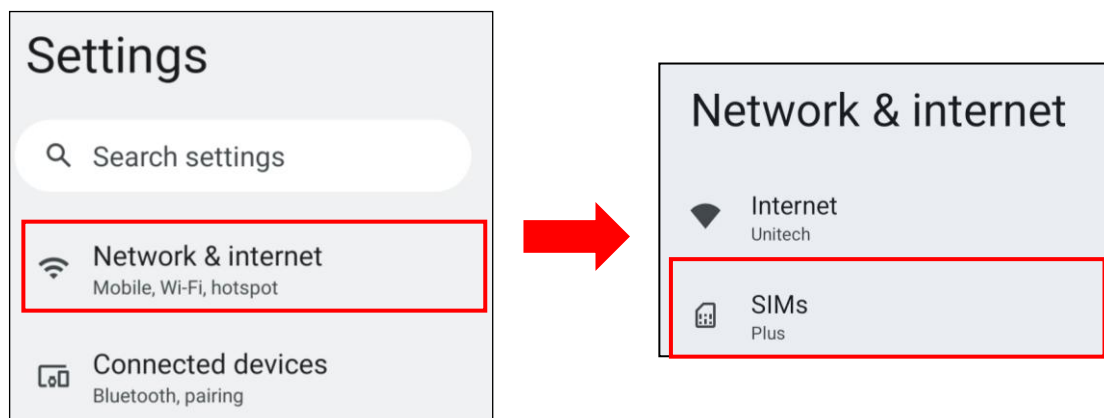

2. Tap **SIM selection**, and then switch between eSIM and nano SIM.

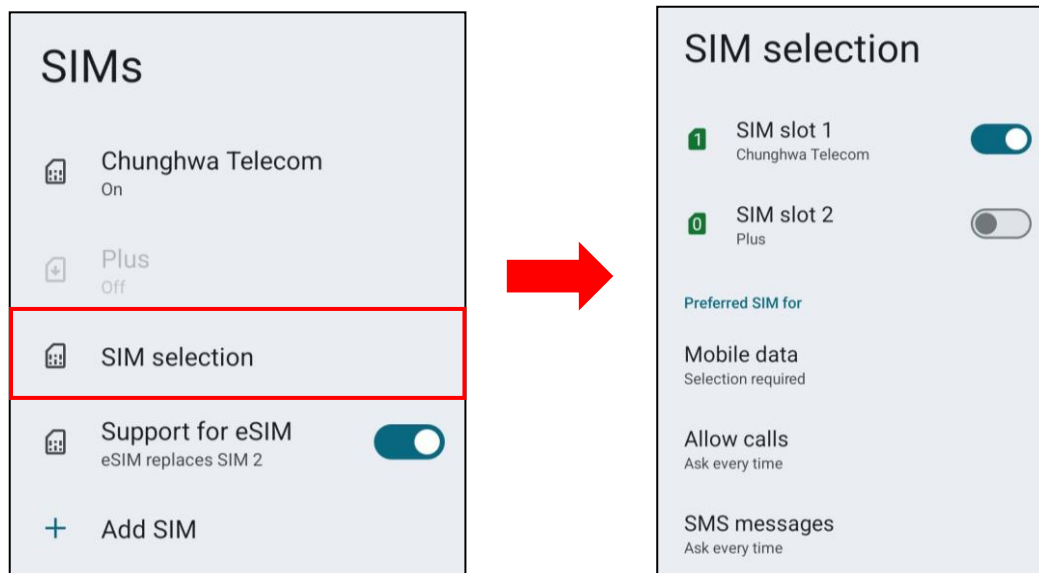


2.3.2 eSIM Settings

1. Connect to Wi-Fi.

Note: Ensure that your device is connected to a stable Wi-Fi network. For the instruction, please refer to [2.4 WLAN Setting](#)


2. Open Network & Internet Settings

Go to **Settings > Network & Internet > SIMs > Add SIM**

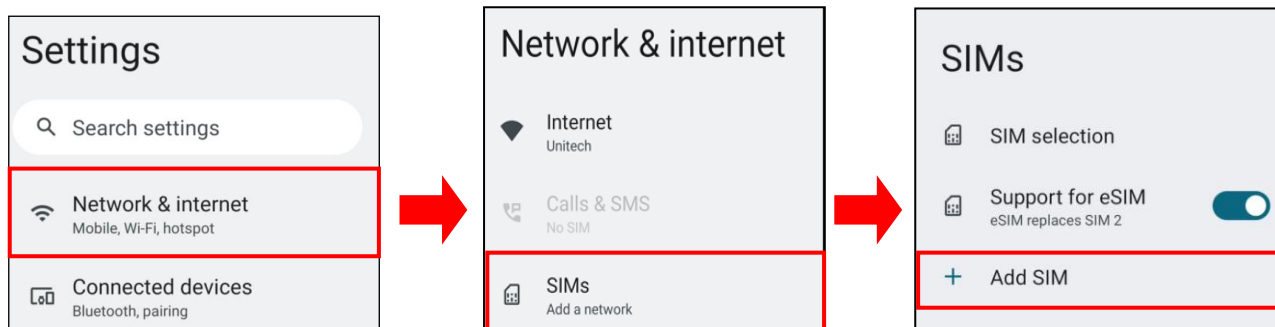

3. Activate eSIM Using a QR Code

Choose **Add eSIM** to set up an eSIM. You'll be prompted to either scan a QR code or enter an activation code provided by your carrier.

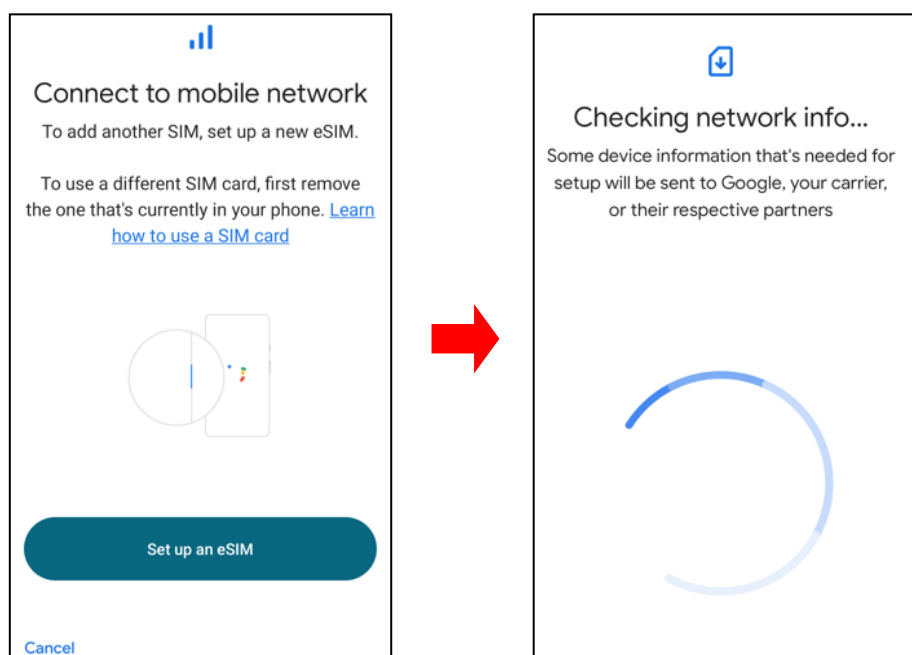


1. Scan QR Code / Enter Activation Code

Select **Scan a QR code** or **Enter activation code** manually. Follow the prompts on the screen to input the details.




2. Complete Activation


Wait a few seconds as the device checks network information and finalizes the eSIM activation process.

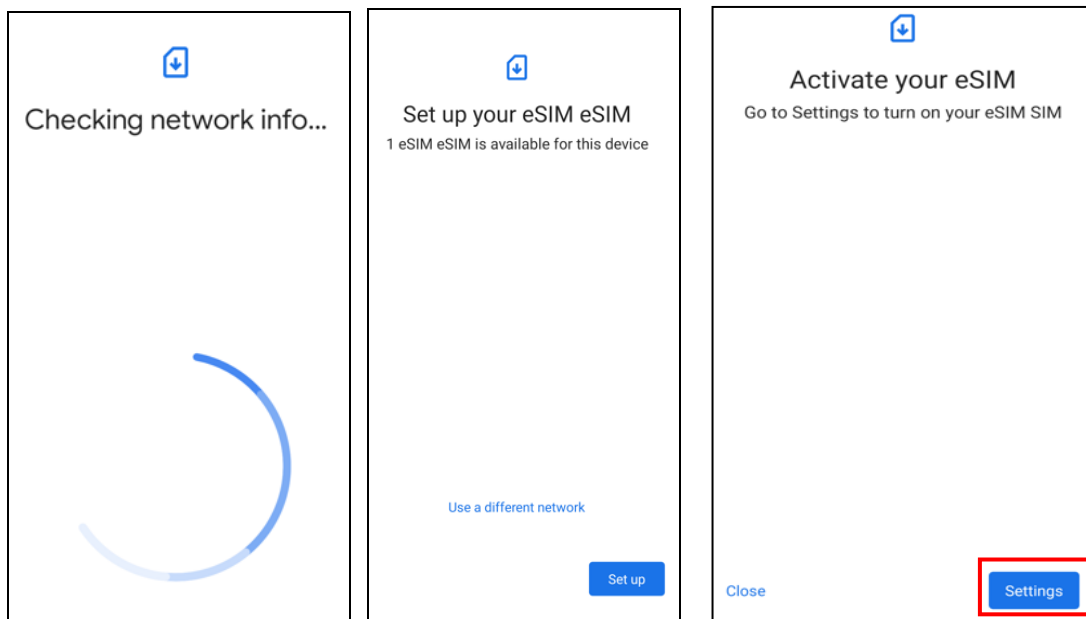

4. Turn on eSIM
Turn on **SIM slot 2** > tap **Turn on**

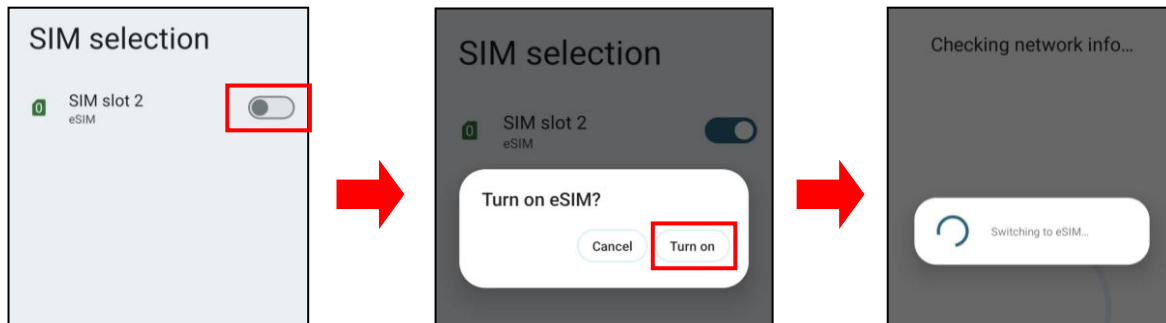

5. Confirm Connection
Once activated, go to **Settings > Network & Internet > SIMs** to view the eSIM information.

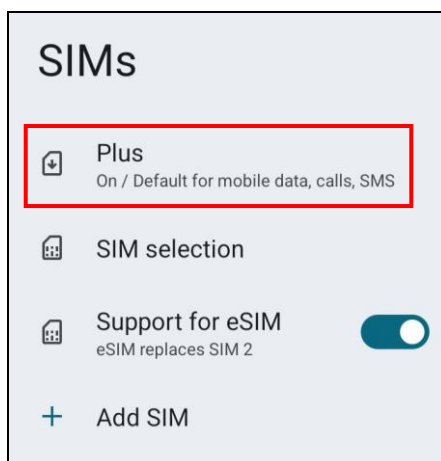


Note:

*If you select "**Erase downloaded SIMs**" during factory reset, the eSIM may not be usable (according to the telecommunications provider's regulations).*


6. Mass Deployment
Rapid configuration of mass deployment of eSIM can be completed through **Stage GO**, please contact Unitech's local sales representative

2.4 WLAN Setting


1. On the main screen, swipe up to access the apps, then tap **Settings** , then tap **Network & internet**, and finally tap **Internet**.

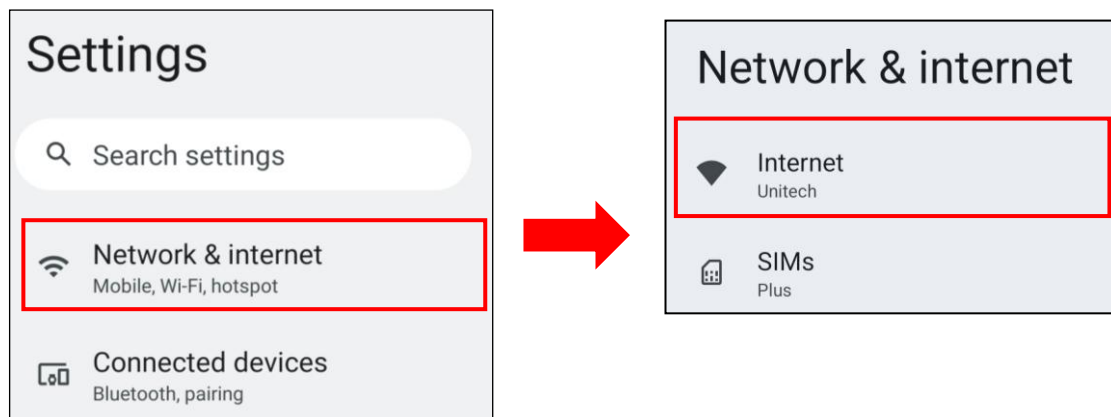


2. Turn Wi-Fi **ON** o view available networks, then select a network.

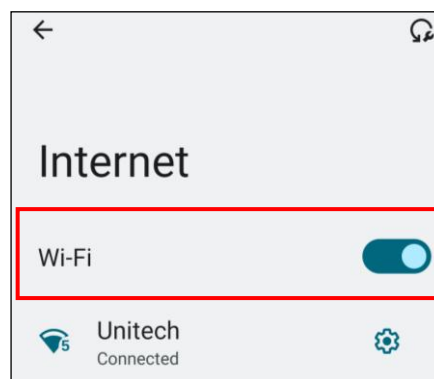

3. Choose the available networks, and enter the Password and tap **Connect**.

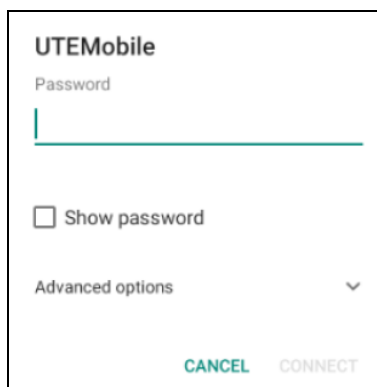

4. If the wireless network that you want is not listed, tap **+ Add network** to manually add it.

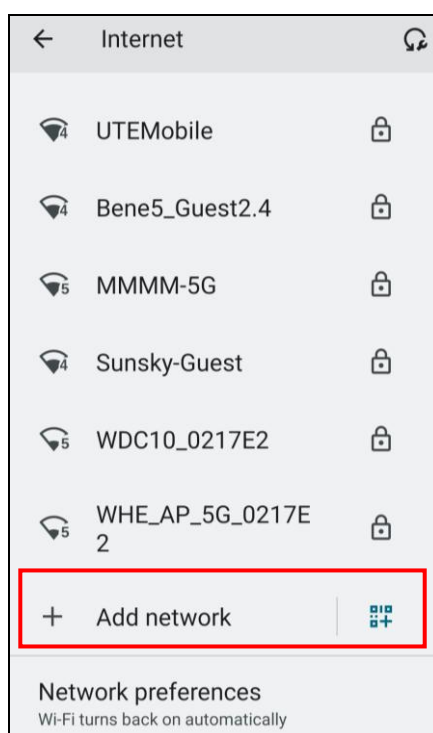


5. When enabled, the icon  is displayed on the status bar.


2.4.1 WLAN Advanced

WLAN advanced can enhance the roaming behavior when the device is in areas of particularly low coverage or losing its connection to the network infrastructure and provides the power save mode to control the power consumption setting. WLAN advanced will help users to manage the seamless roaming.

1. On the main screen, swipe up to access the apps. Tap  **Settings**, then tap **Enterprise Features**, and finally tap **WLAN Advanced**.

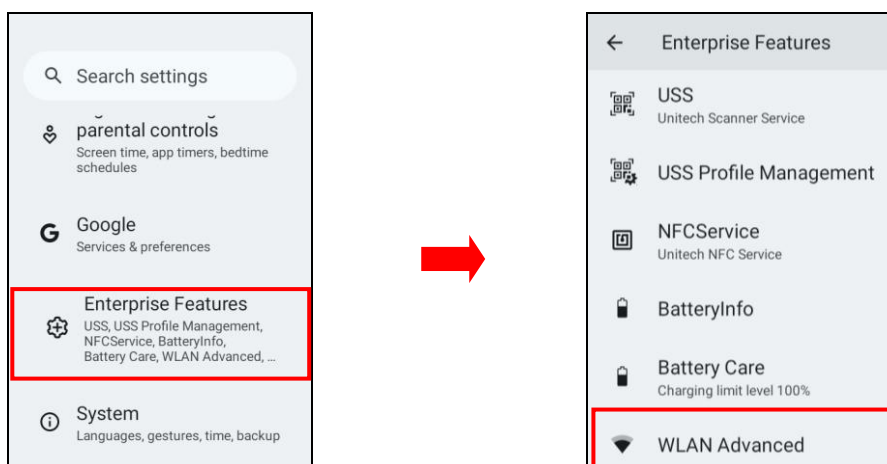


1. Tap on **Advanced**.

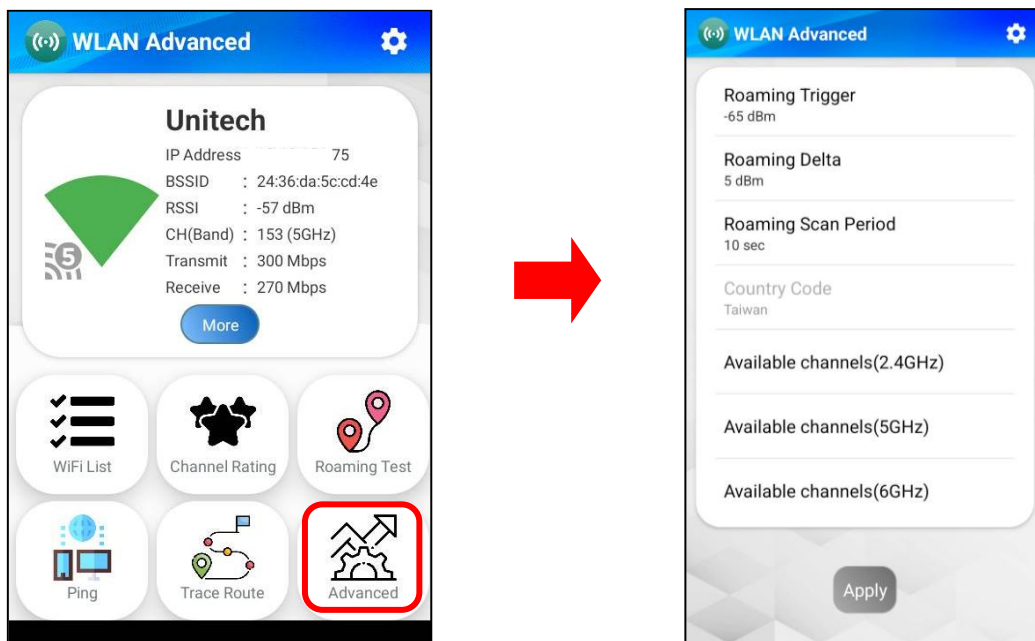

- **Roaming Trigger (Default : -65 dBm, Range : -10 dBm ~ - 120 dBm)**


Roaming trigger will help users to look for a better and stronger signal strength (in dBm) by scanning many access points. When the signal strength is lower than roaming trigger value, roaming trigger will start to look for better access points.

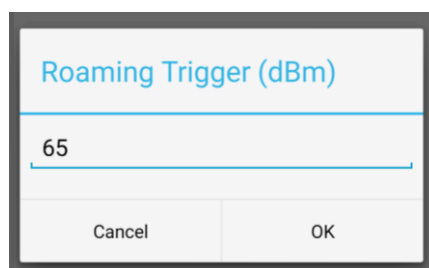

A dialog box titled "Roaming Trigger (dBm)" with a text input field containing the value "65". Below the input field are two buttons: "Cancel" and "OK".

- **Roaming Delta (Default : 5 dB, Range : 0 dB ~ 30 dB)**


Based on roaming delta value, the device will roam to a better signal strength access point.

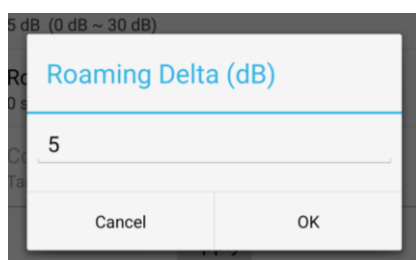

A dialog box titled "Roaming Delta (dB)" with a text input field containing the value "5". Below the input field are two buttons: "Cancel" and "OK".

- **Roaming Scan Period (Default : 10 ms, Range : 0 ms ~ 60 sec)**


The device will stay with the current AP based on the roam period value before it roams to a different AP.

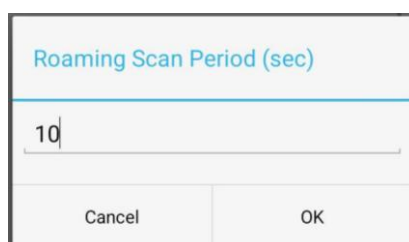

A dialog box titled "Roaming Scan Period (sec)" with a text input field containing the value "10". Below the input field are two buttons: "Cancel" and "OK".


2.4.1.1 Other options

Tap  for more options to import / export the current data from the device. **Initialize** is able to restore the default settings.

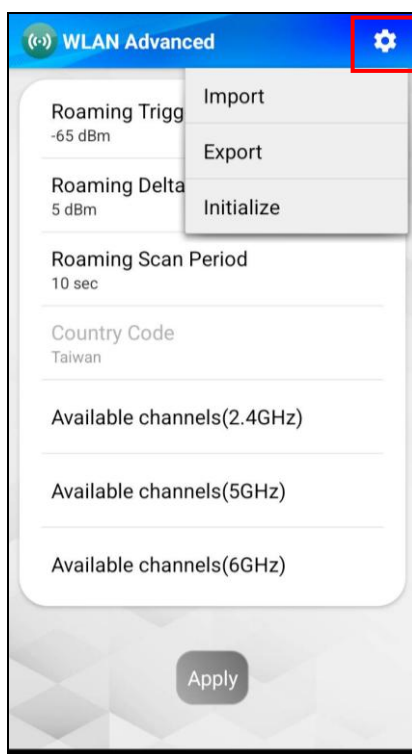


2.4.2 Share Wi-Fi


1. On the main screen, swipe up to access the apps, then tap **Settings** , then tap **Network & internet**, and finally tap **Internet**.

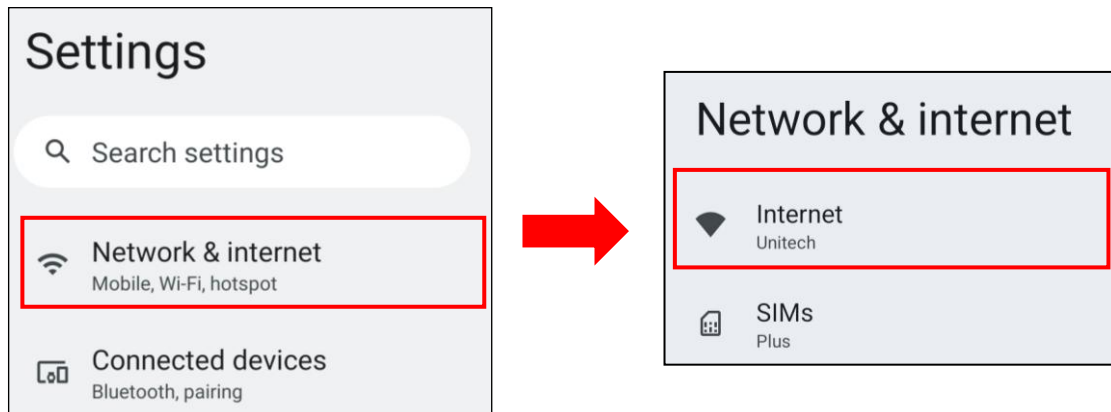

2. Turn Wi-Fi **ON** to view available networks, then select a network.

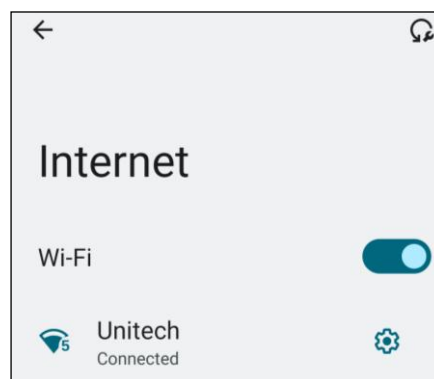


3. When Wi-Fi is connected, tap “**Share**” icon to show QR code.

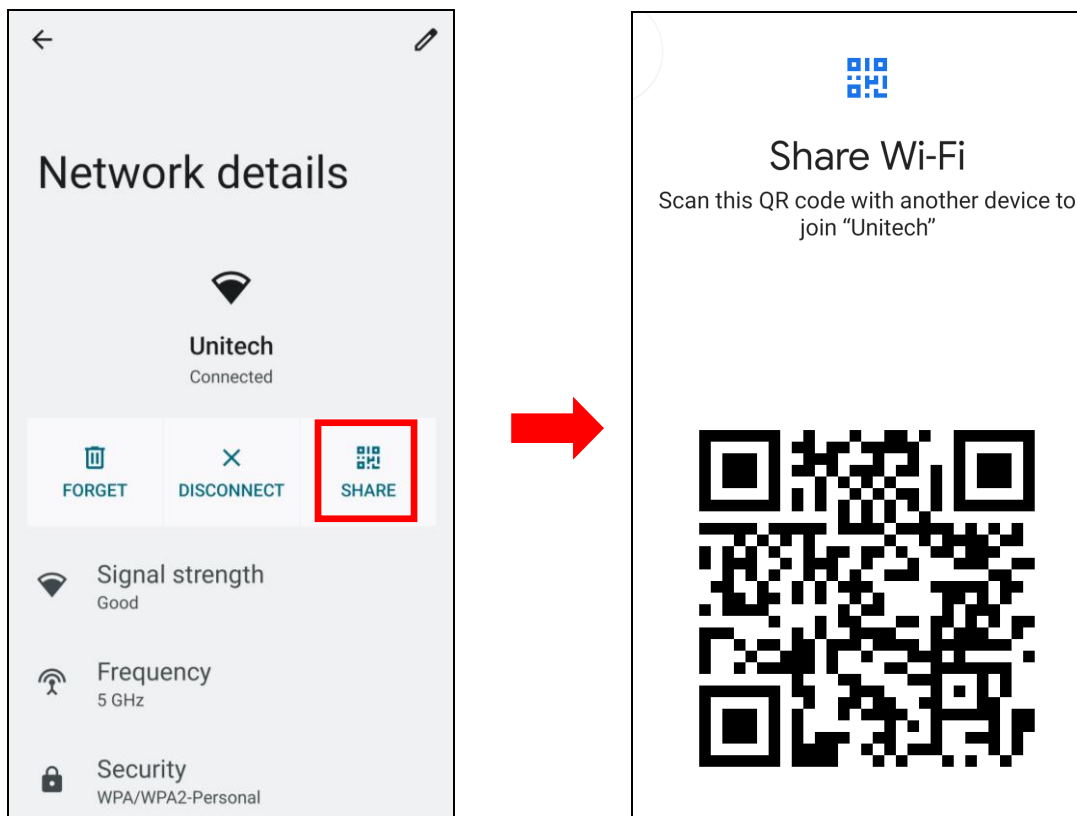


2.5 PAN Setting


1. On the main screen, swipe up to access the apps, then tap **Settings**  , and tap **Connected devices**.

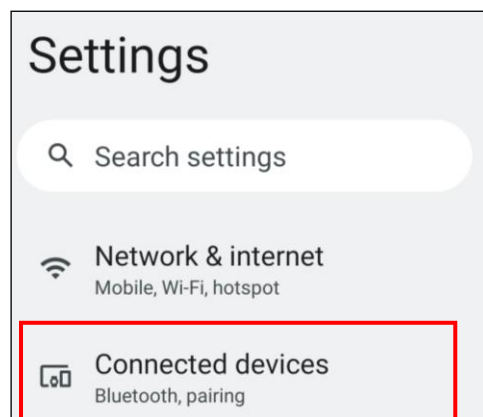

2. Tap **Connection Preferences** to enable **Bluetooth**.

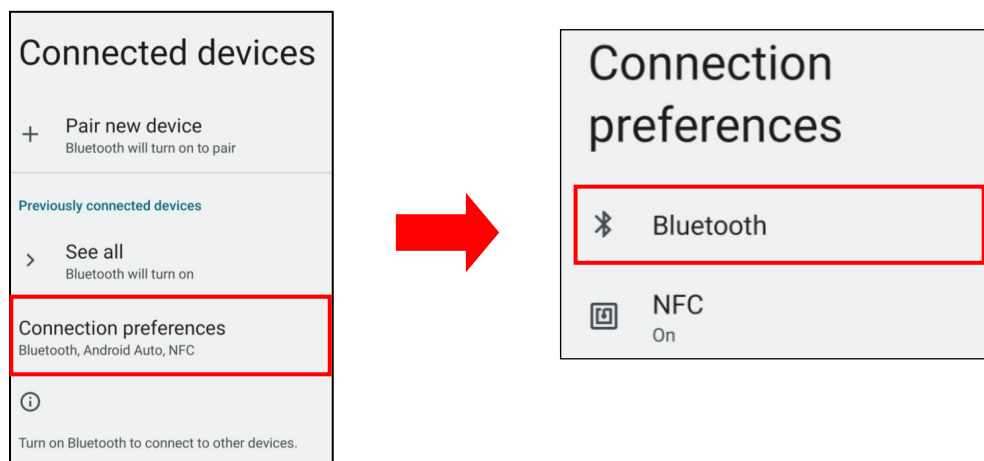


3. To pair the available device, turn Bluetooth **ON** to choose the available device.

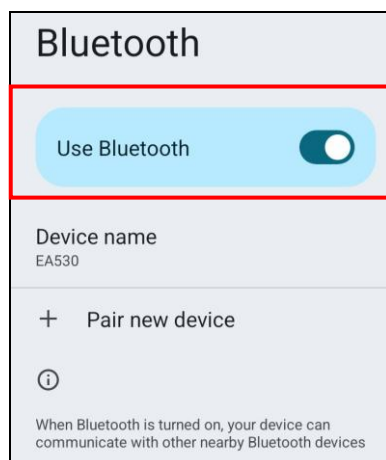


2.6 Location Setting

1. On the main screen, swipe up to access the apps, then tap **Settings** , and tap **Location**.

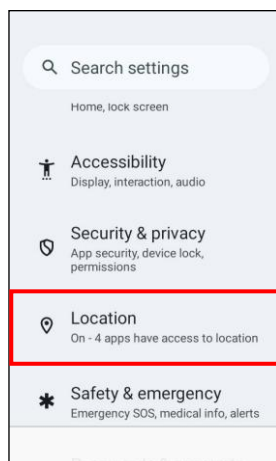

2. Tap **ON/OFF** for the permission to use your location information.

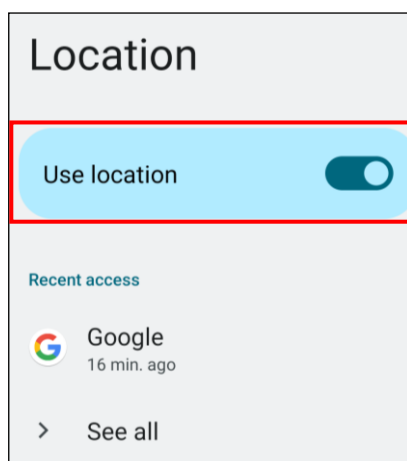


2.7 PC Setting

1. Connect EA530 to your computer with the USB-C cable. Your computer will recognize it is USB charging.




2. Slide down from top, the system will show as follow picture, then you can tap on **Android System** “USB file transfer turned on.”.

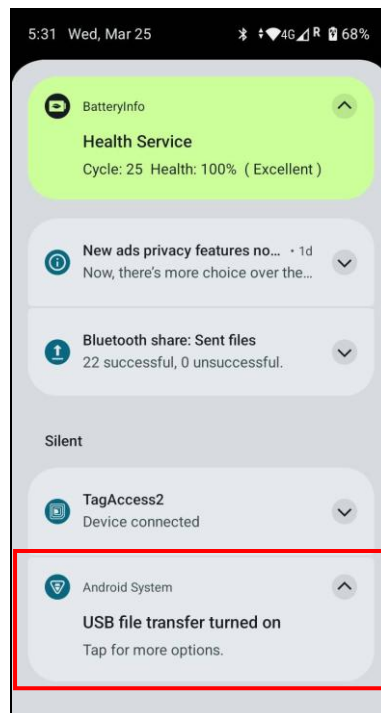


Note:

If you cannot find the **Android System “USB file transfer turned on”** notification in step 2, tap **CLEAR ALL** and try again.

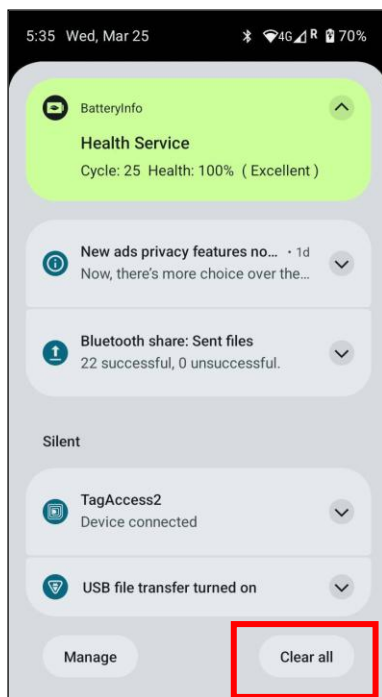


3. Then you can select **File Transfer**.

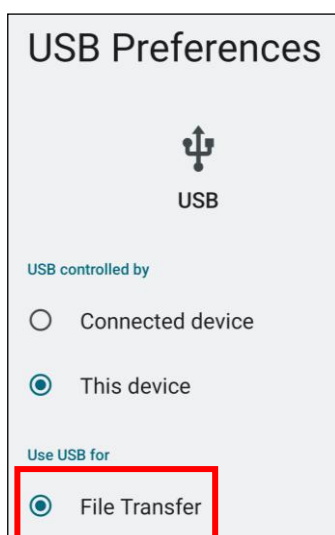


2.8 Camera Setting

1. On the main screen, swipe up to access the apps, and then tap **Camera**.

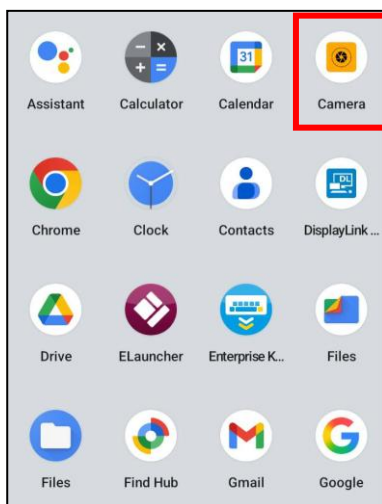

2. Tap  , then tap  to enter the Settings menu.

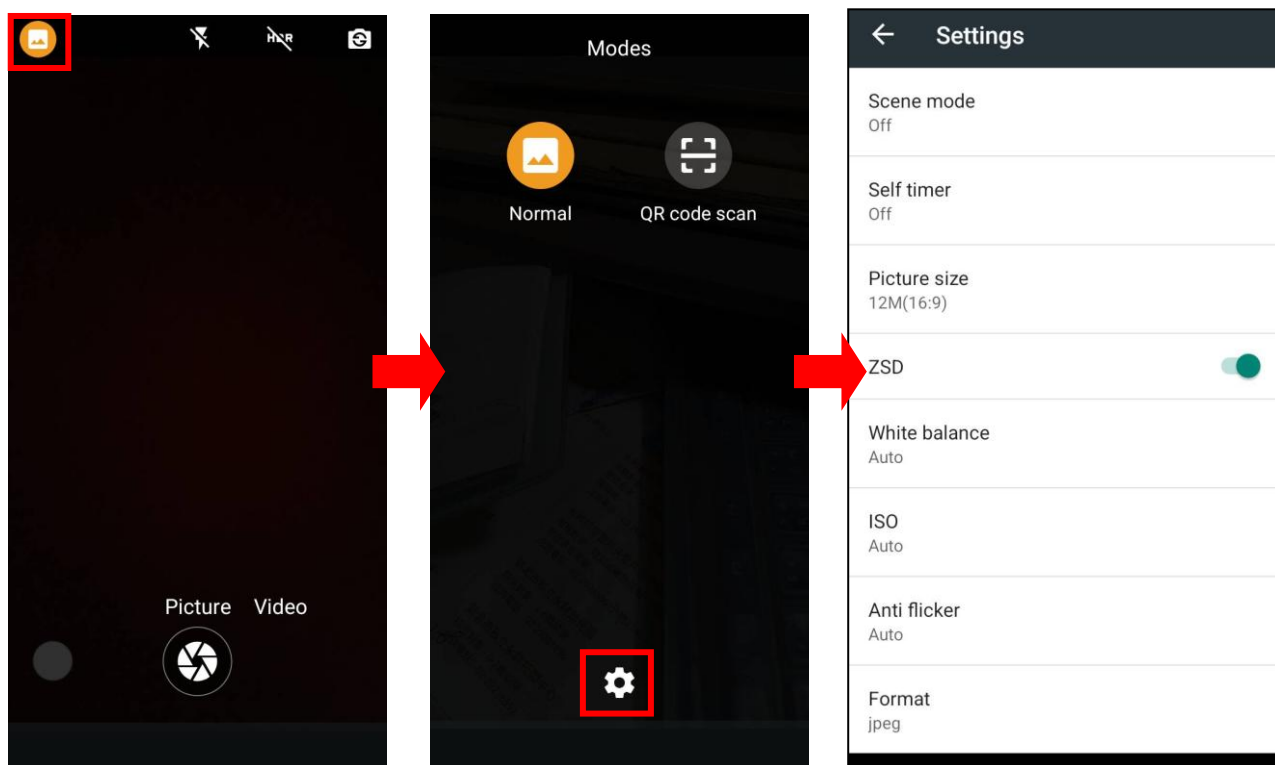

Note: When you open the camera for the first time, the screen will display a brief introduction to the camera settings.

2.8.1 Camera Modes

2.8.1.1 Normal Mode

By default, when you open the camera for the first time, it is set to **Normal Mode**. The icon




appears in the top-left corner.




2.8.1.2 QR Code Scan Mode

Tap , then switch to **QR code scan** mode. You can then scan the QR code.

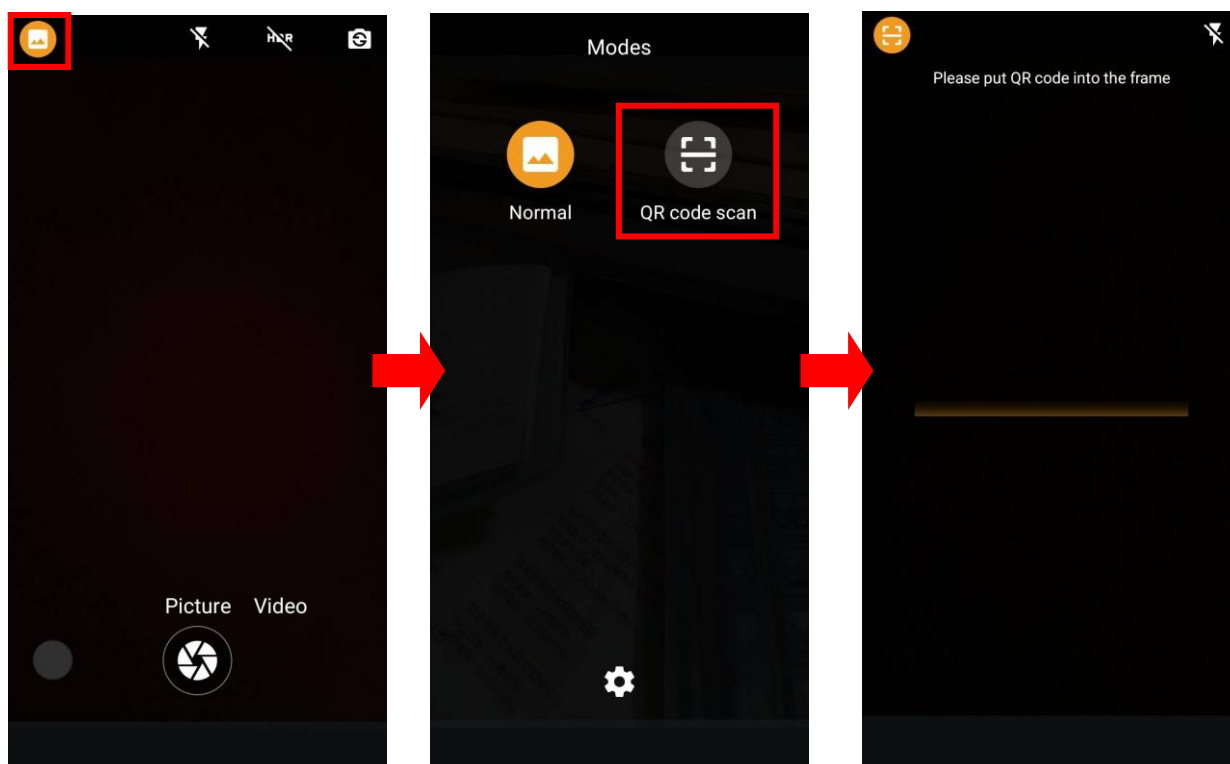


2.8.2 Video Recording

In **Normal Mode**, tap **Video**. Then tap the **Record** button to start recording.

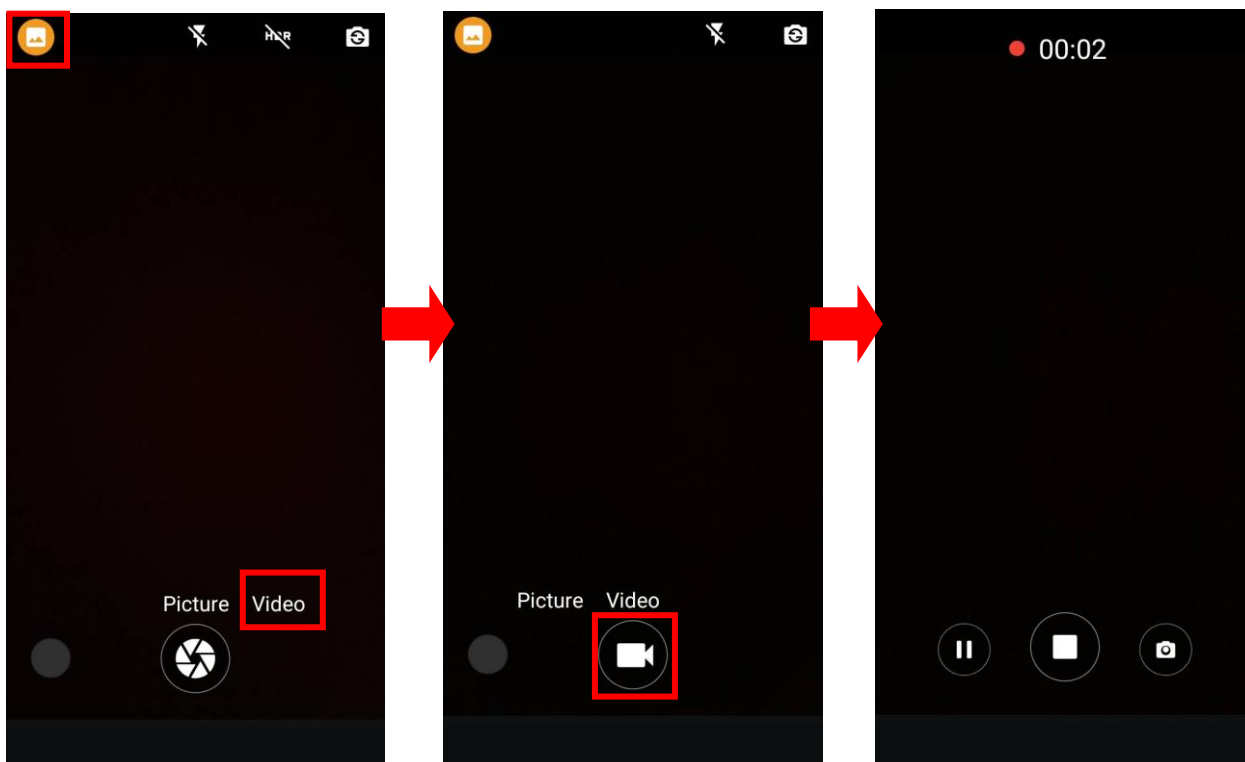


2.9 USS Camera

1. On the main screen, swipe up to access the apps, and then tap **USSCamera**.

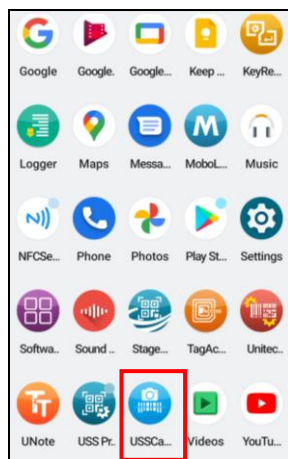


2. Tap  to access **Settings**, then select the barcode types.

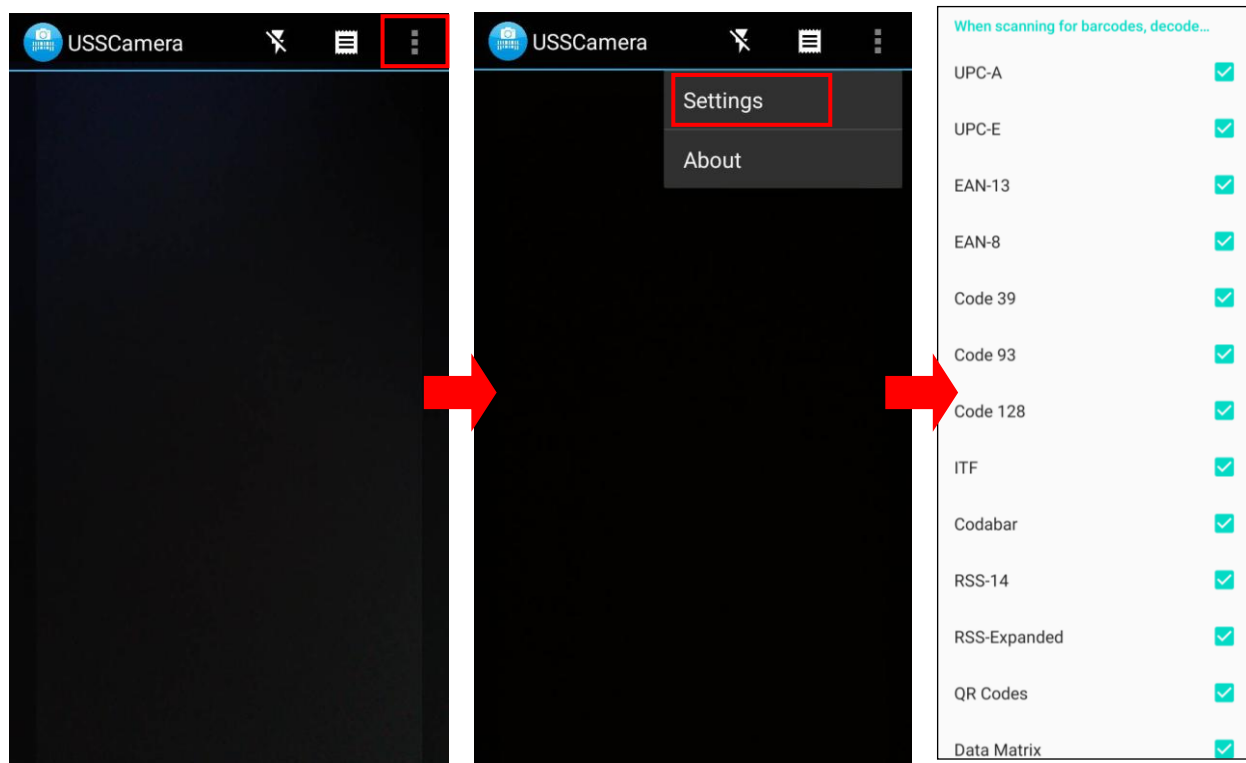


2.9.1 Laser Line Scan

Tap  to access **Settings**, then select **Laser Line Scan**. Only barcodes aligned with the laser line will be decoded.

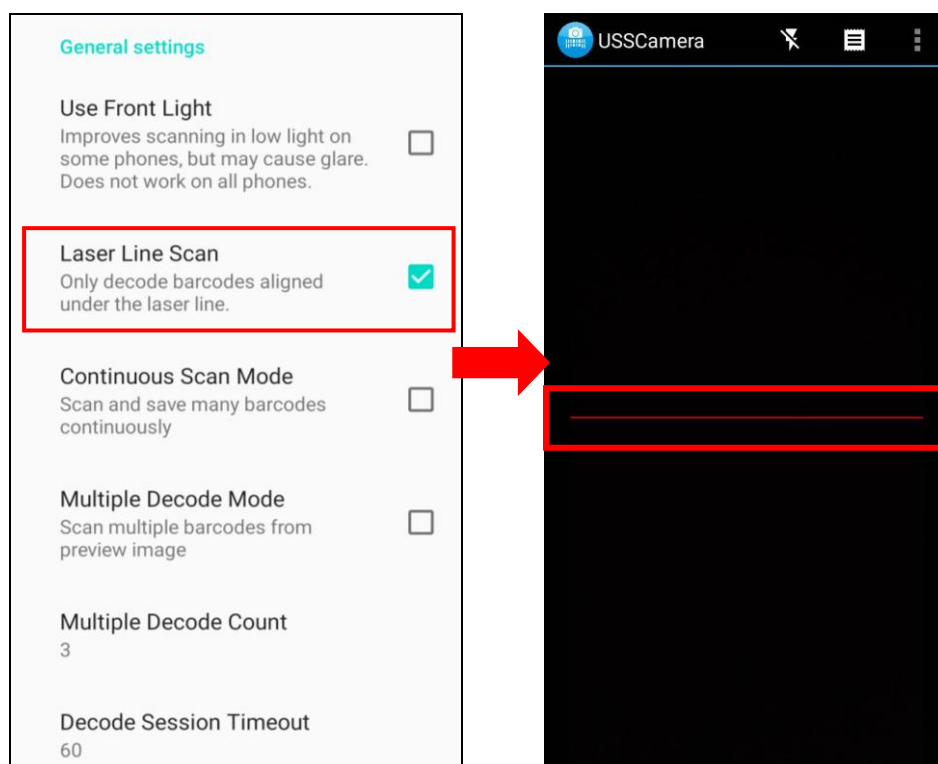

2.9.2 Scan to Key (Floating Window)

Tap  to access **Settings**, then select **Scan to Key** to enable floating window decoding when launched by intent. If enabled, you can start or stop the floating window from the notification. The floating window icon will appear on the main screen.

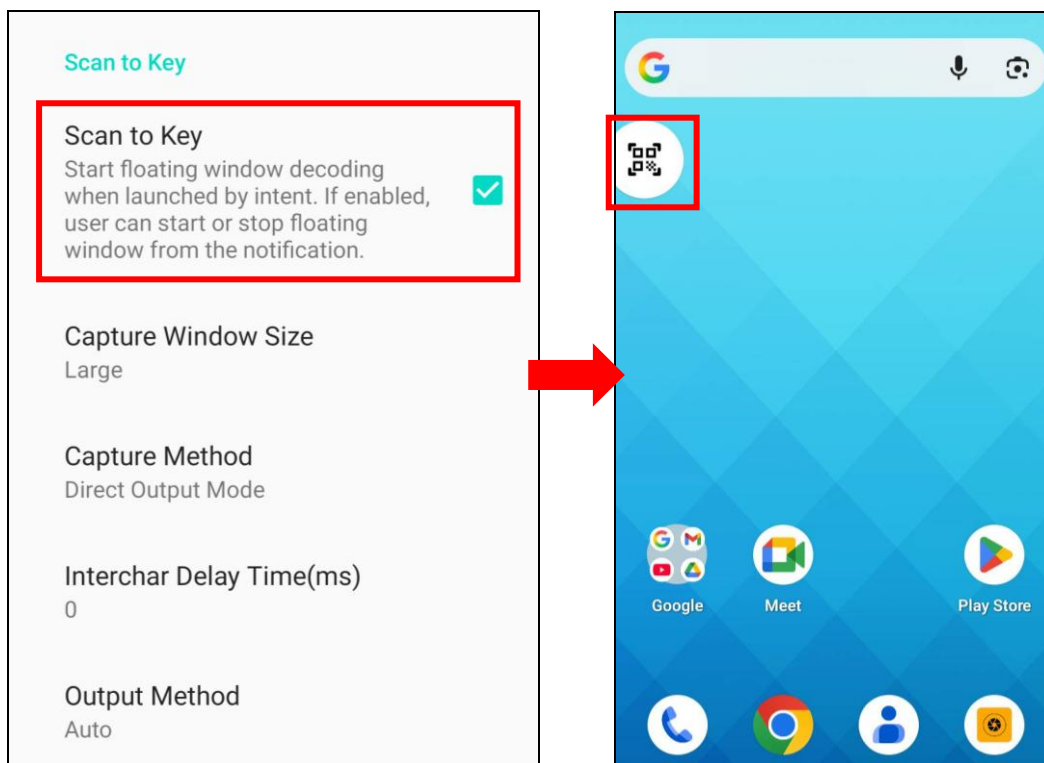

Note: To close the floating window, simply deselect “**Scan to Key**.”


2.10 Performing a Hardware Reset

You may have to perform a reset if the device no longer responds to the buttons or tapping on the screen. Long press and hold the **Power button** around 10 seconds to restart the device.



2.11 Performing Factory Data Reset

On the main screen, swipe up to access the apps, then tap **Settings** , then tap **System**, and finally tap **Reset options**.

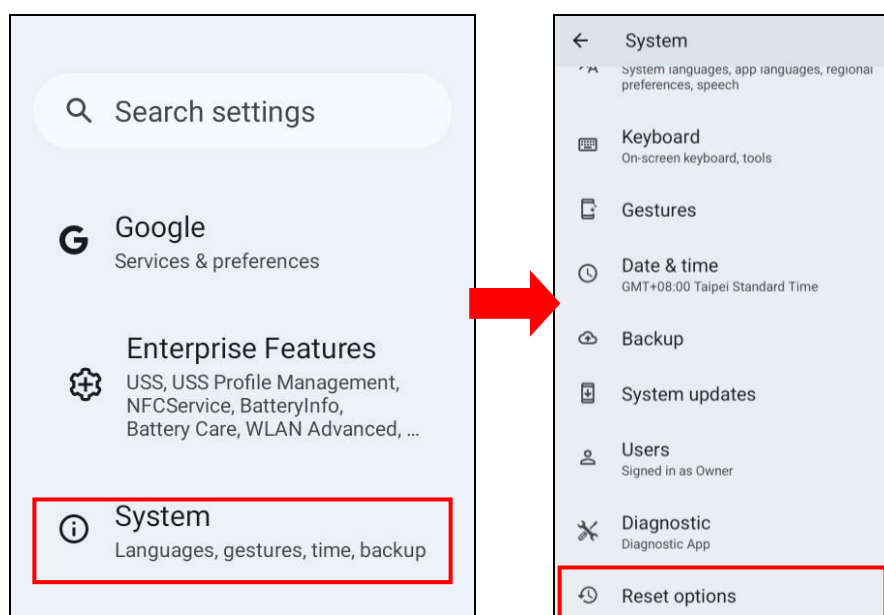

Note:

When you select **Erase all data (factory reset)** in the **Reset Options**, it will erase all folders.

2.12 KeyRemap


The EA530's keys can be programmed for users to be able to perform different functions or applications.

Four options to use key remap functions: Volume_Up/Down, Programmable Key, Scanner Trigger Key Left and Scanner Trigger Key Right.



2.12.1 Remap a Key

1. On the main screen, swipe up to access the apps, and then tap **KeyRemap**.
Select the keys to remap and enable key.

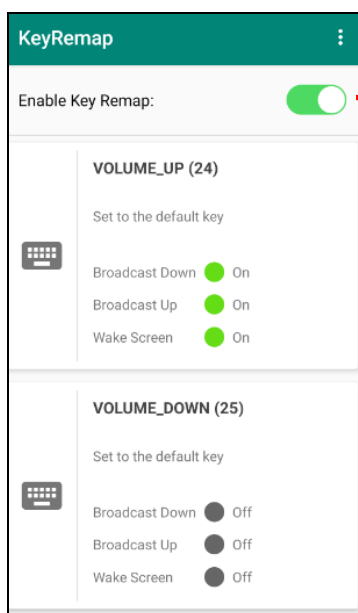


After remapping the key, remember to enable the key remap.

2.12.2 Export / Import a Remap Key Configuration File


■ Export a File

1. Tap 
2. Select **Export**

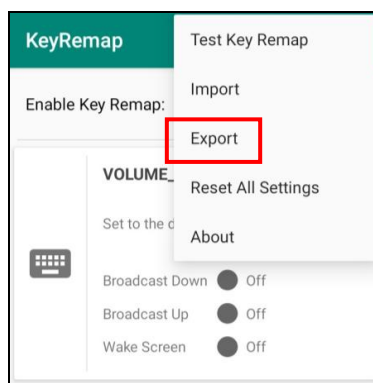

The remap Key configuration can be exported to a text file or imported into EA530.

Note: The configuration file (**keys_config.txt**) is saved in **Files**.

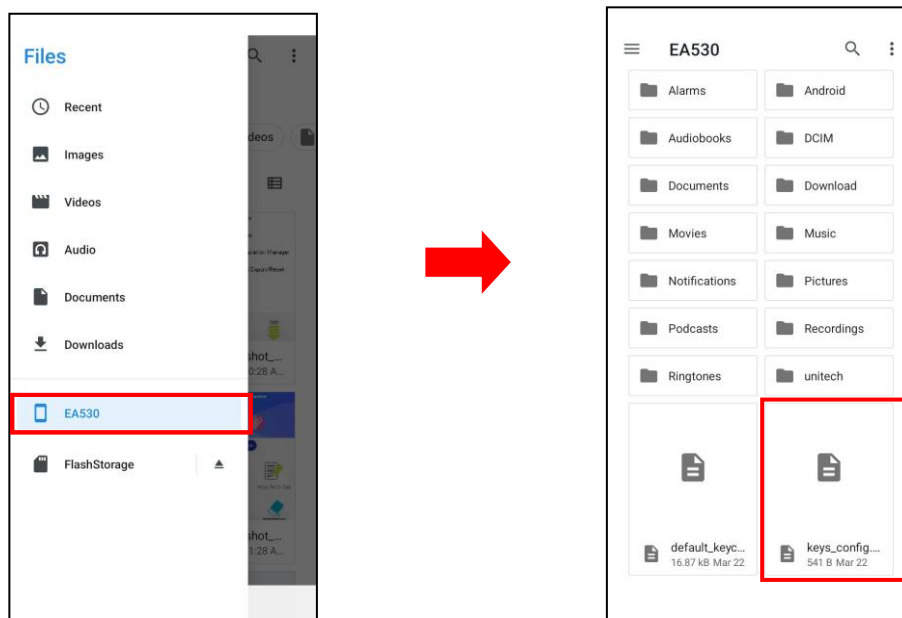


■ Import a File

Before importing the file, please make sure the configuration file (**keys_config.txt**) is in the Files.

1. Tap



2. Select **Import**

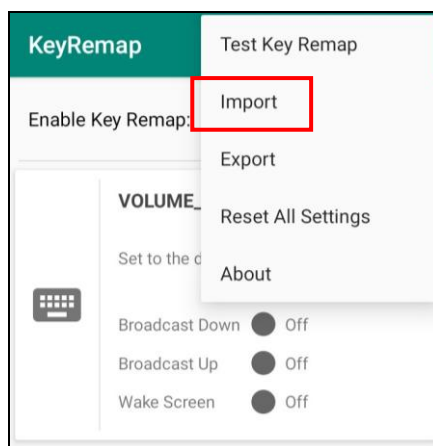


■ Reset all settings

1. Tap



2. Select **Reset all settings**

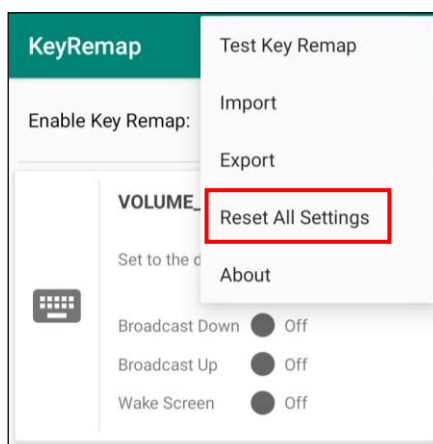


2.13 Split Screen


Split screen function allows you to have two apps work side by side on the same screen. Please follow the steps to enable split screen multitasking.

Note: Some apps may not work with split-screen.


1. Tap **Background App Button** until you see those background apps on the screen.

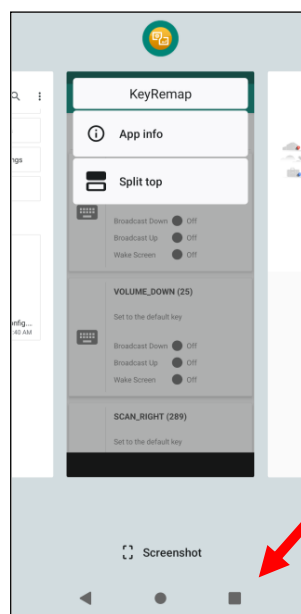

2. Tap and hold the icon which appears above the app thumbnail and then select “**Split top.**” The first app you chose to “**Split top**” will be on top of the screen. For another app to show on the bottom half of the screen, simply tap on the app thumbnail.

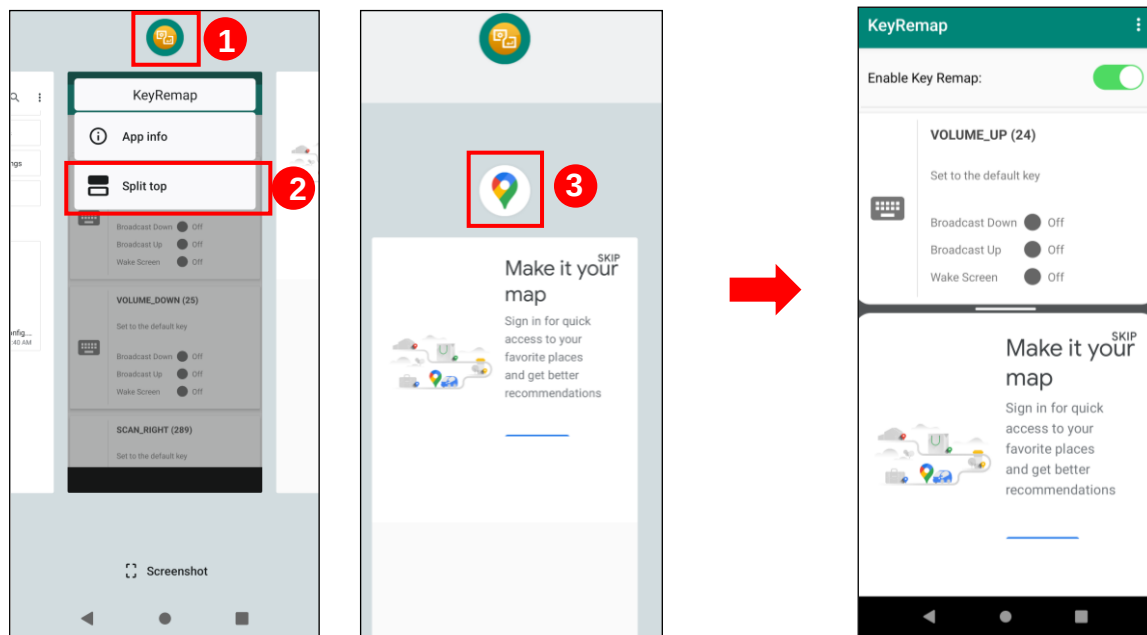


3. To cancel split screen, simply drag up or down the black bar in the middle of two apps to expand the app that you would like to keep in full screen.

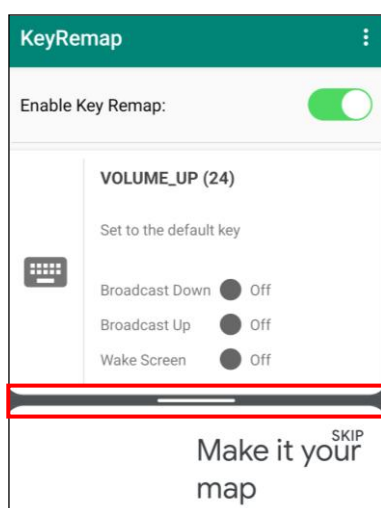


2.14 Network Time Protocol (NTP) Server

The Network Time Protocol is used to synchronize the clocks over the Internet. Allow the users to set the clock by using NTP Server.

1. On the main screen, swipe up to access the apps, then tap **Settings** , then tap **System**, and finally tap **Data & time**.

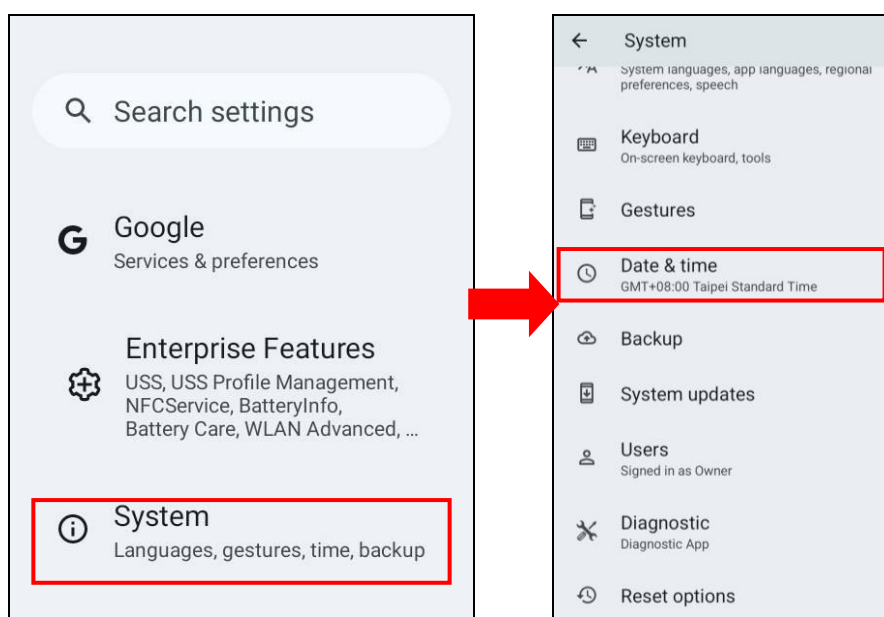


2. Tap **Set NTP**

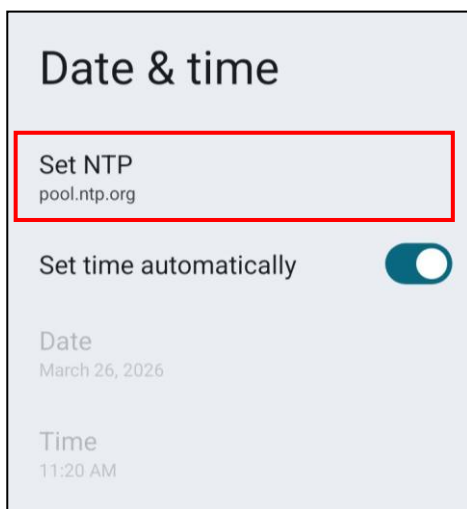

Chapter 3 – Introduction to Applications


3.1 Unitech SW Solutions (Overview)

Solution	Introduction
 USS Camera	USS Camera capture barcode data using the device camera and send the data to your applications as keyboard inputs. Note: For more details, please refer to 2.9 USS Camera.
 Enterprise Keyboard	Enterprise Keyboard gives various methods for user to input data to enhance efficiency and productivity.
 Key Remap	Key Remap reprogram physical buttons to act as another key or to launch an app.
 Logger	Logger provides an easy and fast way to get logs from a device.
 MoboLink	MoboLink can be your best MDM, MAM and MCM companions. You will be able to monitor and manage in real-time the device health of your devices, the locations, non-compliance event reports, online status, as well as manage the application & file deployments, or schedule to run StageGO configuration scripts remotely.
 EBrowser	EBrowser is an enterprise-optimized browser that enhances efficiency and security with robust features. It offers a flexible, intuitive experience for everyday browsing and enterprise customization, with Unitech integration and a comprehensive SDK for deep web-to-hardware integration.

 Software Update	The Software Update app keeps all your installed Unitech software up-to-date. You can choose to automatically update all apps at once, or select only the ones you wish to update. When new apps are available for this device, you will also be able to install them in just a few taps.
 StageGO	StageGO is a barcode-based device staging solution from Unitech that helps IT admins to swiftly set up a device by just a few barcode scans.
 TagAccess	For versatile functions of RFID command via integrating with Unitech RFID Readers.
 Unitech Scanner Utility	Unitech Scanner Utility is an Android application which helps users connect, configure and use a supported Unitech Bluetooth scanner.
 UNote	UNote is a simple text editor. You can use UNote to save scanned barcodes, open and view log files for troubleshooting, and much more.


3.2 USS (Unitech Scan Service)

- On the main screen, swipe up to access the apps. Tap  **Settings**, then tap **Enterprise Features**, and finally tap **USS (Unitech Scan Service)**. You are now entering the USS application.

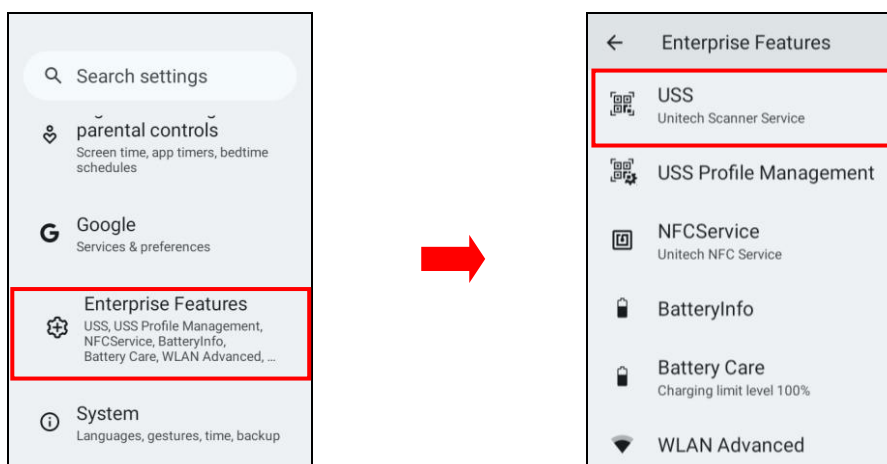


3.2.1 How to Scan


- There are 2 ways to scan the barcodes: Trigger keys on the sides or tap **QR Code button** on this app.

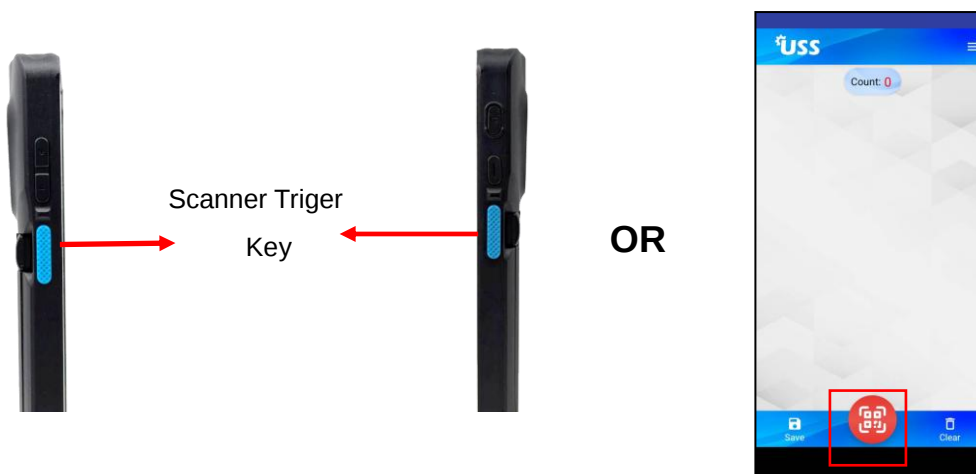

2. Aim the Barcode Scan Engine to the barcode.
3. After scanning the barcodes, the barcode information is as shown below.

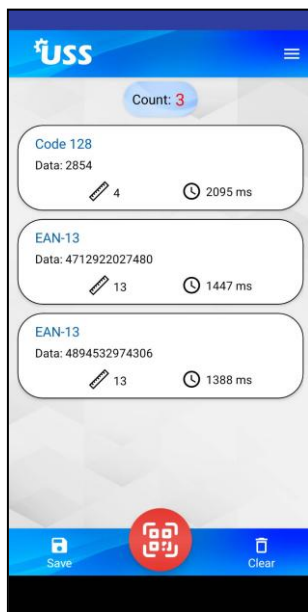


For more options and settings, please tap

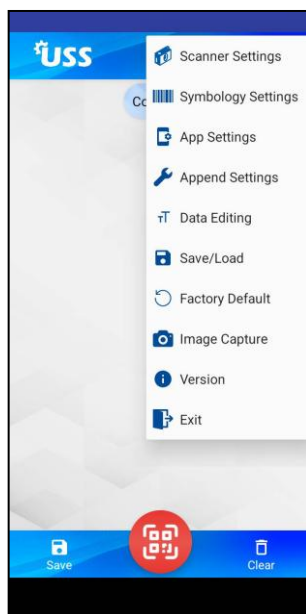

3.2.2 Multi Decode Scan Mode

The Multi Decode Scan function allows users to scan multiple barcodes at once.

1. Tap , then tap **Scanner Settings**
2. Enable **Multi Decode Mode**, enter the number of barcodes to decode (up to 10 counts) and start multi decode scanning.

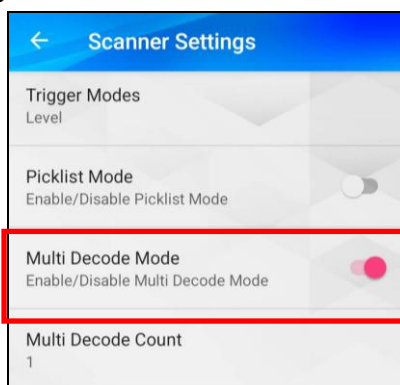


3.2.3 Picklist Mode

The Picklist mode allows the EA530 to decode only barcodes aligned with the laser crosshair or LED aiming dot.

For a Picklist Mode demo, visit our YouTube channel:

https://www.youtube.com/watch?v=QjT2E6hxD_k

1. Tap , then select **Scanner Settings**
2. Enable **Picklist Mode** to scan a single or specific barcode from a field of barcodes.

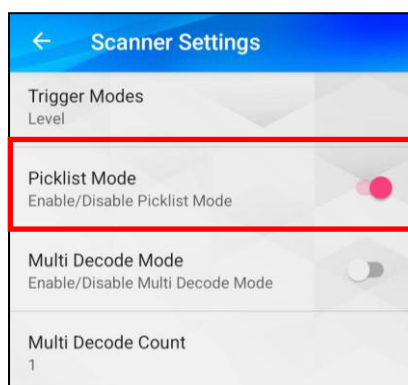

3.2.4 More Information about USS

For more information about USS, please download the document from the below link:

http://w3.tw.ute.com/pub/cs/manual/uss/USS-RA-1-MANUAL_en20210326.pdf


3.3 Enterprise Keyboard

Introduction

Enterprise Keyboard is an AI-assisted virtual keyboard that offers both a traditional typing experience and enterprise-focused features, such as a dedicated number pad, symbol pad, and a tightly integrated keyboard wedge for collecting barcode and RFID inventory data. It also uses AI-assisted text recognition to extract text from camera images and input it directly into applications.

When typing, you can select different input methods.

For example, tap the search bar to begin typing, then tap the keyboard icon in the bottom-right corner to switch input methods.

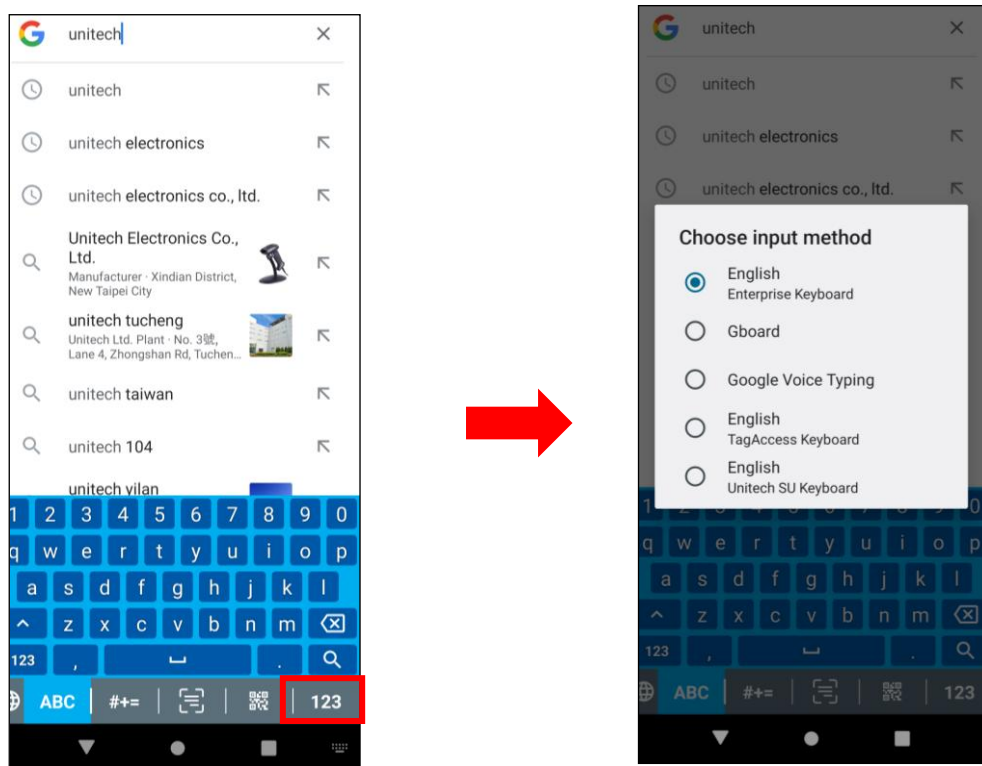

Note: For more information about Enterprise Keyboard, you can visit at:


https://www.ute.com/en/products/detail/Enterprise_Keyboard

3.4 Logger


Introduction

The Logger app offers an intuitive way to collect error logs from a device for troubleshooting. No technical skills required. Simply use the Start-Stop buttons to start recording vital system and app logs as one snapshot or as a time-lapse, and then the logs can be automatically submitted to the unitech support team for analysis.

1. On the main screen, swipe up to access the apps, and then tap **Logger**  . You will see the page below.

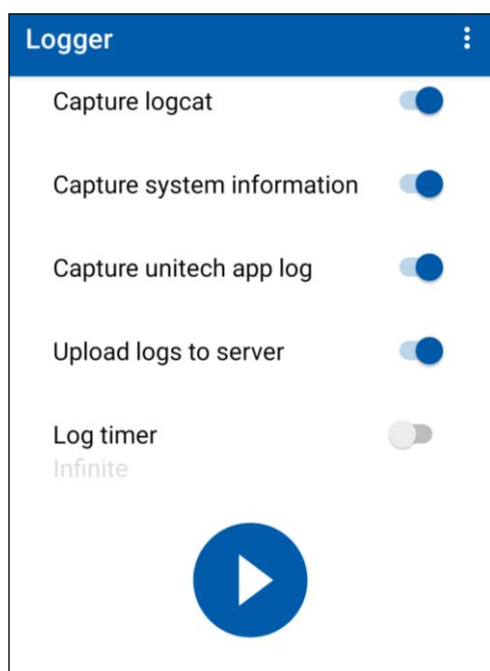


2. Tap on settings to view more.

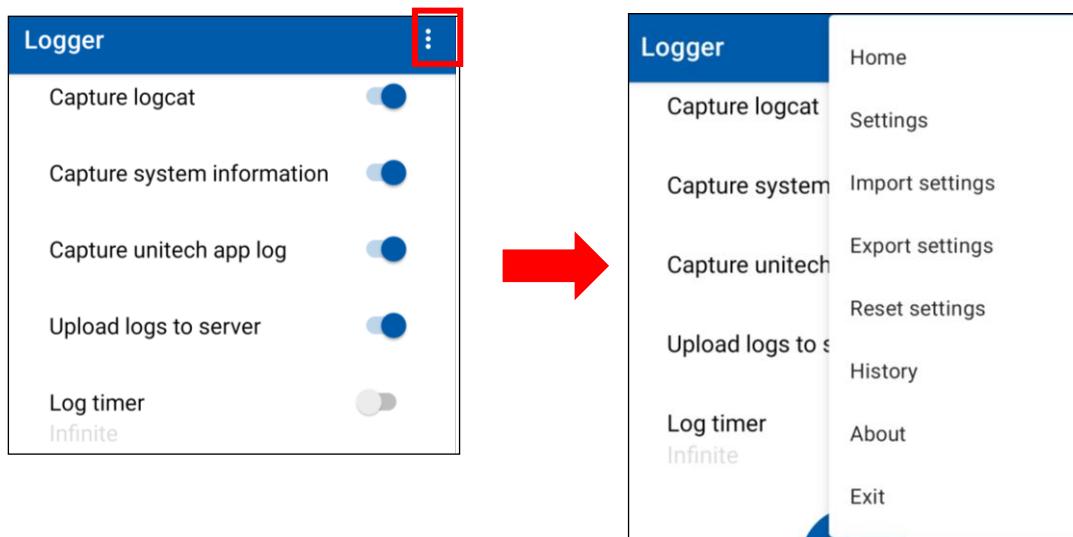


3.5 Software Update

1. On the main screen, swipe up to access the apps, and then tap **Software Update**.
2. To update or check the latest version of each application, please tap **UPDATE**.

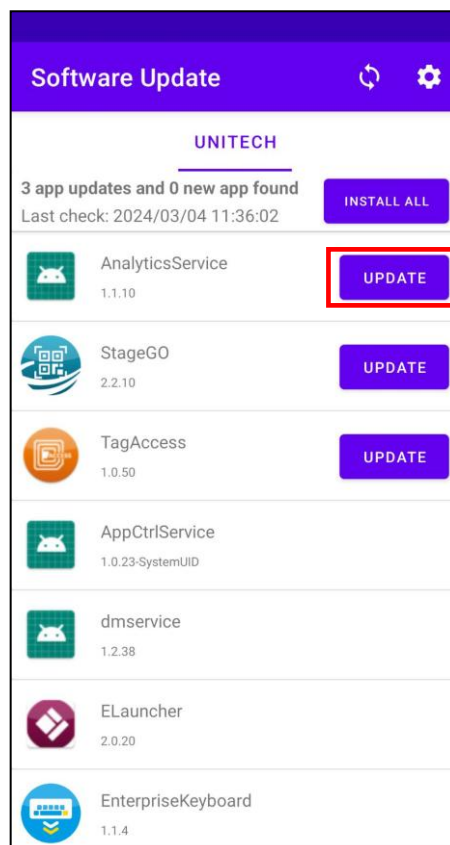

3.5.1 Software Update Settings

Tap  for more settings on **Software Update**..

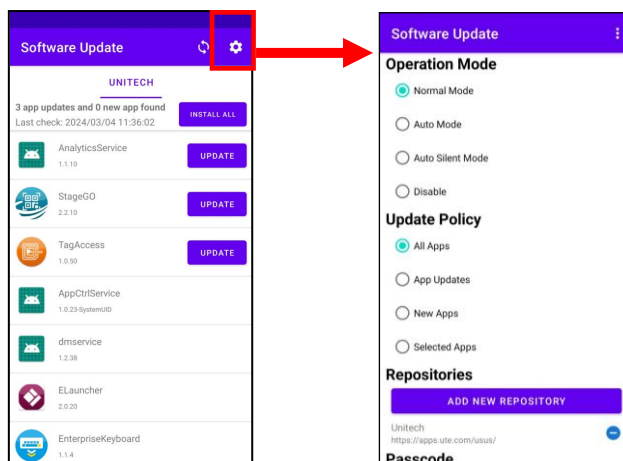

- **Operation Mode**

- Normal Mode: User can manually select apps to update
- Auto Mode: Apps are automatically checked and updated each time Software Update is run.
- Silent Mode: Similar to Auto Mode, but the GUI is hidden during updates (Software Update runs in the background).

- **Update Policy**

- App Updates: Configure whether all or only selected apps are updated, or disable app updates altogether.
- New Apps: Configure whether new apps are installed automatically when they become available.

- **Passcode**

Configure a passcode to access the Software Update settings menu.

- **Import / Export / Reset Settings**

Import or export settings to a file, or reset all settings to factory default. You can find the exported settings file in: EA530/unitech/usus/usus_config.stxt

3.6 Software Update

StageGO is a barcode-based device staging solution from Unitech. It enables IT administrators to quickly set up devices with just a few barcode scans.

Features

- Swift and effortless device staging for Unitech Android Mobile Devices
- More accessible, time-efficient, and secure device staging
- Complete device control at your fingertips
- Data Compression
- Enhanced security and privacy
- No installation required

Using StageGO to configure a device involves 3 simple steps:

Step1: Create Script



Create
Script

It all begins with IT staff creating a StageGO Script on the easy-to-use and secure web-based Script Editor. A StageGO script can contain one or more staging commands such as change system settings, connect to WiFi, download files, install apps, or set restrictions, etc.




Step2: Print QRCode



**Print
QRCode**

This is when the script is ready to be transformed into QRCodes and get printed out for distribution to the fields. The QRCodes are always encrypted so that sensitive information such as username and passwords will stay hidden. You can also choose to save your script as an encrypted file and share it with a colleague.

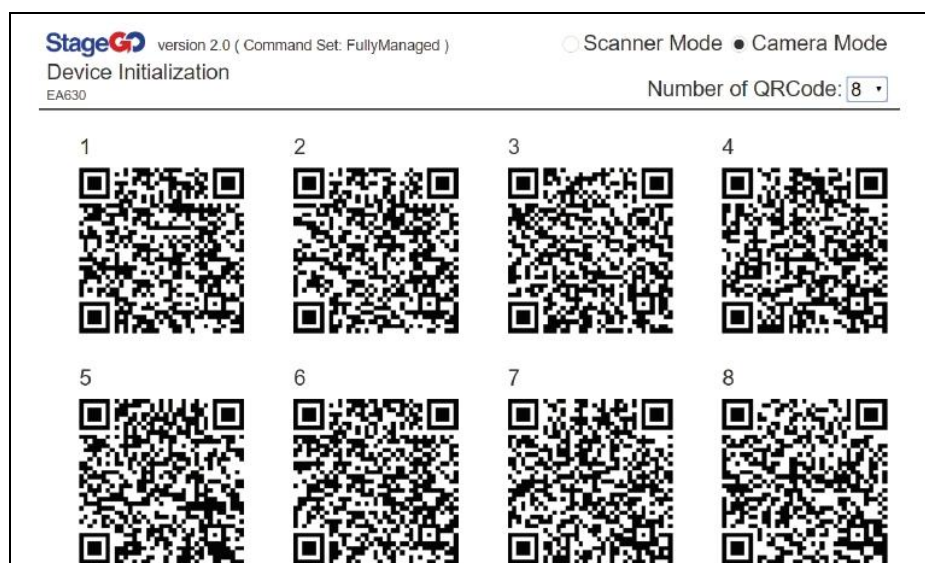

Step 3. Scan QRCode:



Scan
QRCode

The device user scans all the QRcodes into the StageGO app, or alternatively load script from file. The script will then automatically start to execute. Users will be informed of the progress of the execution, and should any execution errors occur, the execution report can be shared to IT admins for investigation.

